



VICTORIAN RAILWAYS

WORKING TIME-TABLE

EASTERN DISTRICT

On and after 31st October, 1982

(NOT TO BE ISSUED TO THE PUBLIC)

Suggestions or proposed alterations for next issue are to be forwarded to
the Chief Operations Manager (Room G.28M, Phone 1092)

VICTORIAN RAILWAYS

EASTERN DISTRICT

WORKING TIME-TABLE

(W.T.T. amending circulars to 16/82 (Passenger); 1010/82 (Goods).
(With Weekly Notice Amendments to W.N. 28/82)
Replacing Working Time-table Book effective from 4th October, 1981.

INDEX

TRAIN TIME-TABLES.

Line.	Pages
Bairnsdale (via Maffra) Goods Service	22-28
Bairnsdale (via Sale) Passenger Service	6-13
Bairnsdale-Orbost	29
Barry Beach Junction-Barry Beach	30-33
Dandenong-Wonthaggi-Inverloch Road Coach Service	18, 19
Melbourne-Yarram Road Coach Service	16, 17
Morwell Briquette Siding	22-28
Sale-Bairnsdale Co-ordinated Road Coach Service	7, 8, 10
Traralgon-Maffra Road Coach Service	14
Traralgon-Sale-Stratford Goods Service	25, 26, 28
Yallourn	22, 28
Yarram Goods Service	30-33

INDEX TO GENERAL INSTRUCTIONS

	Pages
Block Notes, Eastern District	36
Boom barriers	38
Crossing Tracks and Refuge Sidings, Length of	70
Distance Table from Melbourne	37
Flashing Light Signals	38
Goods Trains, Authorised Working.	66-68
Goods Trains, Up, Marshalling of	68
Lines, closure of	34
Load Schedules, general reference to footnotes	45
Locomotive Running Schedules (Passenger)	41
Locomotive Running Schedules (Goods)	44-51
Locomotives assisting in Front of Trains	63
Locomotives assisting in Rear of Trains	63
Locomotive classes allowed to run on various lines	53-57
Locomotives running Tender first	63
Numbering of Country Trains	3
Numbering of Train Time-tables, Footnote references, etc.	3, 43
Parcels Coaches and Motor Coaches, Loads of	43
Passenger Trains, Make up of	39
Passenger Train and Rail Motor Running	3
Passenger Trains, Working of Bogie Louvre and Freight Vehicles	39
Pushing Trains on Running Lines	65
Schedule Loads, Goods Trains	43
Scheduled Stopping Arrangements for Country Passenger Services	3
Speed, Authorised not to be exceeded	53, 54
Speed, Locomotives, Trains and Rail Motors, on various lines and at various places	53-62
Suburban passengers not to travel by Country Trains	3
Symbols, Station Reference.	4
Symbols, Train Reference.	4
Trailing of Vehicles behind Passenger Trains	65
Trains on Running Lines without a Brakevan in the Rear	62, 63, 65
Watering Facilities	39
Working Time-table, Amending Circulars	72-74

NOTE: Consult the Working Time-table Addenda for instructions regarding Rolling Stock mass, lengths and operating instructions also other general matters common to all Working Time-table books.

GENERAL NOTES.

A copy of every new issue of the WORKING TIME-TABLE BOOK, or section of the Book, is to be supplied to all concerned in accordance with Regulation 8.

It is imperative that each Stationmaster carefully check this Time-table, regarding the timing of trains, crossing arrangements, etc., so far as his own station or the stations he supervises are concerned. He will be held responsible for promptly bringing under the notice of the Time-tables Co-ordinator (Room G.38) and Manager, Suburban Stations or Manager, Country Train Operations (Eastern) any inaccuracies that may appear herein. WALL SHEET TIME-TABLES issued in conjunction with this book are to be posted in a prominent position at a height from the ground and in close proximity to a light to enable passengers to consult it with facility. A red line must be ruled on each time-table under the name of the station concerned and time applying to it.

PASSENGER TRAIN AND RAIL MOTOR RUNNING.—Depot stations must obtain full particulars from Guards of the late running of Passenger Trains and Rail Motors. In the case of a Rail Motor run without a Guard, the necessary particulars shall be obtained from the Engineman. In the event of any time being lost by the locomotive, the cause, also locomotive number and class, must be ascertained from the Engineman and the Train Controller advised. Enginemen will require to explain the cause of any time lost that in the aggregate exceeds the time gained on the journey.

When a Passenger Train or Rail Motor is blocked at a roadside station, the Train Controller must be advised by the Stationmaster at the station at which the block occurred and if the train which caused the block was running late, the cause of such late running (whether overtime in section or other cause) must be given if ascertainable.

SUBURBAN PASSENGERS NOT TO TRAVEL BY INTERCITY AND INTERURBAN TRAINS.

Country trains to and from Melbourne including Rail Motors as well as Locomotive hauled Passenger Trains shown in the Working Time-table books are not available for inter-station passenger travel within the electrified suburban area unless otherwise specified in the Time-table books.

One class suburban ticket holders are not permitted to travel in first class carriages.

SCHEDULED STOPPING ARRANGEMENTS FOR COUNTRY PASSENGER SERVICES.—The instructions regarding action to be taken by train men concerning "if required" stops when necessary for passenger purposes are shown on page 4.

NUMBERING OF COUNTRY TRAINS.—With the introduction of Train Descriptor Numbers in the Metropolitan District Working Time-table, all Country Passenger and Goods trains that pass through the Metropolitan Area are allocated numbers for the various Country Districts as shown hereunder:—

TRAINS

	PASSENGER	GOODS
Northern and Midland.	8000-8099	9000-9099
North Western.	8100-8199	9100-9199
South Western.	8200-8299	9200-9299
North Eastern.	8300-8399	9300-9399
Eastern.	8400-8499	9400-9499
Standard Gauge.	8600-8699	9400-9499


The Werribee-Newport shuttle service will carry Metropolitan numbers, viz 6451 onwards for "Down" trains and 6450 onwards for "Up" trains.

24 HOUR TIMINGS

24 hour timings are used throughout this Time-table and associate Train Running Documents.

The hours are numbered consecutively from 01 to 23 then 00 (as shown on the dial). Instead of a.m. and p.m., 12 is added to the hours after midday, thus 1.00 p.m. becomes 13 00, 5.00 p.m. becomes 17 00, 9.00 p.m. becomes 21 00 (or 21 19 or 21 47 according to the minutes after the hour) and so on. Midnight is 00 00 and times between midnight and 1.00 a.m. are shown by the figures 00 01 to 00 59.

Note—All quotations of train times to the travelling public should still be in 12 hour a.m. and p.m. times. Wall-sheet and Public Time-tables will continue to be shown in 12 hour a.m. and p.m. times.

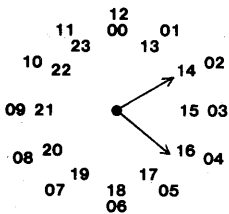

TRAIN TIME-TABLE REFERENCE SYMBOLS

Express, Passenger, Rail Motor and Mixed trains must stop at stations where so scheduled in the time-tables. Where the times of arrival and departure of trains are not both stated, the times shown are of those of departure from stations.

Where the time for the train is shown without the addition of one of the undermentioned symbols or other special reference, a definite stop must be made.

Where the following standard symbols viz., *, ∇, d, u, ††, π, # and ● are utilized with or without, as the case may be, a time being shown, they indicate how the train shall be dealt with at the particular station or stations, e.g., whether non-stop, or to stop in certain circumstances.

The symbols referred to and their application to the timetable are as follows:-

* Trains will not stop to pick up or set down passengers at stations where the train schedule is marked thus, or where this symbol occurs without an accompanying time.

∇ Indicates that the train shall only require to stop at the station or Rail Motor Stopping Place concerned in the following circumstances:

- (1) When signalled from the station to stop, indicating that there are passengers, vangoos and/or mails to be entrained.
- (2) And/or when the train is conveying passengers, vangoos or mails for the station. The Guard is responsible for informing the Engineman that there are passengers, vangoos, or mails to be discharged. If no conductor on train, the Guard must make the necessary inquiries among the passengers at the previous stopping station. If no Guard be employed on a Rail Motor, the Engineman must make the necessary inquiries.

d Trains to stop to set down, if required, but not to pick up passengers at stations where the train timetable is marked thus. Passengers desiring to alight must give notice to the Conductor at the previous stopping station, where Conductors must also inquire. On trains which have no Conductors, the Guard will be responsible for this duty. If no Guard be employed on a Rail Motor, the Engineman must make the necessary inquiries. The Guard is responsible for informing the Engineman that there are passengers to be detrained.

u Picks up only.

†† Trains marked thus run only if required. Special advice will be issued by the Chief Operations Manager, Chief Train Controller, District Senior Train Controller or Depot Stations when the running of such trains is necessary.

● Indicates that the train must when practicable be despatched from the station concerned at the earlier time shown.

π Train stops to set down only, if required, but not to pick up passengers.

Not advertised

◆ Indicates that the Road Coach shall only stop when signalled to do so by an intending passenger and/or when conveying passengers for that stop.

▲ Reservations are compulsory by this train. Bookings must be made through the Central Reservation Bureau or Regional Booking Centres.

STATION REFERENCE SYMBOLS

E.S. Electric Staff Stations.

† Staff Stations, at which the staff, a Staff Ticket, or a Line Clear Report must be received before starting, and delivered on arrival.

NC No one in charge stations.

○ Stations Worked under Rail Agent conditions, but at which the employees in charge are authorised to collect freight charge.

LIST OF STATION NAME ABBREVIATIONS

The names of the originating and destination stations respectively in the heading (Formed by) and foot (Forms) of each page have been abbreviated and are set out hereunder:-

Adelaide	ADE	Geelong	GLG	South Geelong	SGL
Albury	ALY	Horsham	HSM	Spencer Street	SSS
Bacchus Marsh	BMH	Kyneton	KNT	Sunbury	SBY
Bairnsdale	BDE	Leongatha	LGA	St. Albans	SAB
Ballarat	BAL	Melton	MEL	Sunshine	SUN
Bendigo	BDG	Mildura	MDA	Swan Hill	SWH
Broadmeadows	BMS	Newport	NPT	Traralgon	TRG
Cobram	CRM	Numurkah	NMK	Warragul	WRG
Dandenong	DNG	Pakenham	PAK	Warrnambool	WNB
Dimboola	DIM	Sale	SAL	Werribee	WER
Donald	DON	Seymour	SEY	Woodend	WED
Essendon	ESD	Shepparton	SHP	Yarram	YRM
Flinders Street	FSS	South Dynon Loco.	SDL		

MELBOURNE-WARRAGUL-TRARALGON-SALE-BAIRNSDALE - Passenger Service
MONDAY TO FRIDAY

Run No.	E 41	E 41	E 40	20	E 42	E 40	E 43
Formed by Arrival	ON	ON	8440 07 01 WRG	8214 07 51 GLG	8442 08 25 TRG	8456/57 12 19 TRG	8446/47 09 22 TRG
STATIONS	8400 PASS Mon. Only	8401 PASS. Tue. to Fri.	4021 Suburban Electric	8406 "The Gipps- lander" ▲	8411 PASS.	8414 PASS.	8418 PASS.
UP:							
SPENCER STREET dep.	04 55	08 26●D	..	12 45	13 47●
FLINDERS STREET arr.	04 59 u	08 30u	..	12 48u	13 51u
DOWN:	8401	8407	..	8415	8419
FLINDERS STREET dep.	05 00	..	06 37-A	08 31●	09 15	12 50	13 52●
Richmond	*	..	06 40	*	*	*	*
Caulfield	05 15 u	..	06 51	08 47u	09 30u	13 05u	14 07u
Carnegie	*	..	*	*	*	*	*
Murrumbena	*	..	*	*	*	*	*
Hughesdale	*	..	*	*	*	*	*
Oakleigh	05 20*	..	06 57	08 52*	09 35*	13 10*	14 12*
Huntingdale	*	..	*	*	*	*	*
Clayton	*	..	*	*	*	*	*
Westall ○	*	..	*	*	*	*	*
Springvale	05 26*	..	07 05	08 58*	09 41*	13 16*	14 18*
Sandown Park ○	*	..	07 07	*	*	*	*
Noble Park	*	..	07 09	*	*	*	*
Yarraman	*	..	07 12	*	*	*	*
DANDENONG arr.	07 15-C
			8403 PASS				
	dep. 05 34 u	..	07 25	09 06u	09 51u	13 24u	14 26u
General Motors NC	*	..	*	*	*	*	*
Hallam NC	*	..	*	*	*	*	*
Narre Warren	05 40*	..	07 31*	09 12*	09 57*	13 29*	14 31*
Berwick	05 43*	..	07 34*	09 15*	10 00*	13 32*	14 34*
Beaconsfield	*	..	*	*	*	*	*
Officer	05 48*	..	07 39*	09 19*	10 04*	13 36*	14 38*
PAKENHAM arr.
	dep. 05 54	..	07 46	09 23*	10 10	13 42	14 42*
Nar-Nar-Goon	06 00*	..	07 52	09 28*	10 16	13 49	14 47*
Tynong	*	..	07 58	*	10 22	13 54	*
Garfield	*	..	08 02	*	10 26	13 59	*
Bunyip ES	arr.
Longwarry ES ○	dep. 06 09*	..	08 06	09 36*	10 30	14 02	14 55*
	arr.
	dep. 06 13*	..	08 10	09 40*	10 34	14 07	14 58*
Drouin	06 21	..	08 19	09 47*	10 43	14 16	15 04*
WARRAGUL arr.	06 29	..	08 26	09 54	10 50	14 25	15 11
	dep. 06 35	06 35	08 27	09 56	10 52	..	15 12
Darnum ○	*	..	*	*	*	..	*
Yarragon ○	06 44	06 44	08 37	10 03*	11 01	..	15 21
Trafalgar	06 51	06 51	08 43	10 08*	11 07	..	15 27
Moe	arr.
	dep. 06 58	06 58	08 52	10 16	11 15	..	15 35
Herne's Oak NC	arr. 07 05*	07 05*	15 41*
	8446	8446	*	8456	*	..	8468
	dep. 07 09*	07 09*	..	10 22*	15 44*
Morwell ES	arr.
	dep. 07 15	07 15	8454	10 29	11 27	..	15 52
Traralgon ES	arr. 07 30	07 30	09 04 09 20	10 41	11 40	..	16 05
	dep.	10 49
Rosedale ES	11 09
SALE ES arr.	11 31
	dep.	11 39
Stratford Junction ES NC	11 53*
STRATFORD ES	11 57
Stratford Station
Fernbank ES ○	12 17*
Fernbank (Billabong R'house)
Lindenow Sth. (Opp. Hotel)
Lindenow (General Store)
Lindenow ○	12 27*
Hillside NC	*
BAIRNSDALE ES arr.	12 45
Forms/Destination	8454/55 08 50 SSS	8454/55 08 50 SSS	8456/57 10 00 SSS	8468/69 13 25 SSS	8460/61 12 50 SSS	8464 15 10 FSS	8474/75 17 00 SSS

● No. 8406/07 may depart Spencer Street 08 25, Flinders Street 08 30. No. 8418/19 may depart Spencer Street 13 45, Flinders Street 13 50.

A-Express Richmond to Caulfield, Caulfield to Oakleigh and Oakleigh to Springvale.

C-Passengers change trains.

MELBOURNE-WARRAGUL-TRARALGON-SALE-BAIRNSDALE
Passenger Service

Monday to Friday-Continued

Run No.		E 42	E 41	E 40	20	20	E 43	
Formed by Arrival		8460/61 15 20 TRG	8454/55 11 18 TRG	8464 16 52 WRG	8468/69 17 43 BDE	8468/69 17 43 BDE	8474/75 19 34 TRG	
STATIONS		8420 PASS.	8422 EMPTY CARS	8425 PASS.	8430 PASS. Mon. to Thur. ▲	8432 PASS. Fri. ▲	8436 PASS.	
UP:								
SPENCER STREET	dep.	15 40	16 15	..	18 26●	18 26●	21 15	..
FLINDERS STREET	arr.	15 44u	16 20u	..	18 30u	18 30u	21 19u	..
DOWN:								
		8421	8423 PASS		8431	8433	8437	
FLINDERS STREET	dep.	15 46●	16 50	17 50	18 31●	18 31●	21 20	..
Richmond
Caulfield	..	16 01u	17 05u	18 05u	18 47u	18 47u	21 36u	..
Carnegie
Murrumbidgee
Hughesdale
Oakleigh	..	16 06*	17 10*	18 11*	18 52*	18 52*	21 41*	..
Huntingdale
Clayton
Westall ○
Springvale	..	16 12*	17 16*	18 17*	18 58*	18 58*	21 47*	..
Sandown Park ○
Noble Park
Yarraman
DANDENONG	arr.	16 19u
"	dep.	16 21	17 25u	18 25u	19 07u	19 07u	21 56u	..
General Motors NC	..	16 25u
Hallam NC
Narre Warren	..	16 31*	17 31*	18 31*	19 13*	19 13*	22 01*	..
Berwick	..	16 35	17 34*	18 34*	19 16*	19 16*	22 04*	..
Beaconsfield
Officer
PAKENHAM	arr.	16 40*	17 40*	18 38*	19 21*	19 21*
"	dep.	16 47	17 47	18 44	19 28*	19 28*	22 14	..
Nar-Nar-Goon	..	16 53	17 54	18 51	19 33*	19 33*	22 21	..
Tynong	..	16 59	18 00	18 56	22 26	..
Garfield	..	17 03	18 06	19 01	22 31	..
Bunyip ES	arr.
"	dep.	17 07	18 10	19 04	19 41*	19 41*	22 34	..
Longwarry ES ○	arr.
"	dep.	17 11	18 14	19 09	19 44*	19 44*	22 39	..
Drouin	..	17 20	18 23	19 18	19 51*	19 51*	22 48	..
WARRAGUL	arr.	17 27	18 30	19 25	19 58	19 58	22 55	..
"	dep.	17 29	18 32	..	20 00	20 00	22 57	..
Darnum ○
Yarragon ○	..	17 38	18 41	..	20 09	20 09	23 07	..
Trafalgar	..	17 44	18 48	..	20 16	20 16	23 14	..
Moe	arr.
"	dep.	17 52	18 56	..	20 24	20 24	23 22	..
Herne's Oak NC	arr.
"	dep.
Morwell ES	arr.
"
Traralgon ES	dep.	18 04	19 08	..	20 36	20 36	23 34	..
"	arr.	18 15	19 20	..	20 48	20 48	23 45	..
"
Rosedale ES	dep.	20 56	20 56
Sale ES	arr.	21 17	21 17
"	21 40-C	21 40
"	ROAD
"	COACH
Stratford Junction ES NC	dep.	21 45	21 48
STRATFORD ES	22 02*
Stratford Station	22 06
Fernbank ES ○	22 00
Fernbank (Billabong R'house)	22 28*
Lindenow Sth. (Opp. Hotel)	22 17
Lindenow (General Store)	22 32
Lindenow ES ○	22 36
Hillside NC	22 37*
BAIRNSDALE ES	arr.	22 55	22 55
Forms/Destination		8478 18 30 WRG.	OFF	OFF	OFF	OFF	OFF	

● No. 8420/21 may depart Flinders Street 15 45.

No. 8430/31 and 8432/33 may depart Spencer Street 18 25, Flinders Street 18 30.

C-Passengers change.

BAIRNSDALE - SALE - TRARALGON - WARRAGUL - MELBOURNE.
Passenger Service.

Monday to Friday.

Run No.	E 40	E 42	E 43	21	E 41
Formed by Arrival	ON	ON	ON	ON	8400/01 07 30 FSS/WRG
STATIONS	8440 PASS.	8442 PASS.	8446 PASS.	ROAD COACH	8454 PASS.
UP:					
BAIRNSDALE ES dep	05 40	..
Hillside NC
Lindenow O	05 55	..
Lindenow (General Store)	05 59	..
Lindenow Sth. (Opp. Hotel)	06 13	..
Fernbank (Billabong R'house)
Fernbank ES O	06 32	..
Stratford Station
STRATFORD ES arr
" dep
Stratford Junction ES NC	06 50-C	..
SALE ES arr
				8450 PASS.	
				07 00	..
				07 20	..
				07 42	..
				07 50	08 50
Rosedale ES dep
TRARALGON ES arr	..	06 00	06 50
dep
Morwell ES arr
		06 12	07 02	08 02	09 02
Herne's Oak NC dep
arr
		..	07 08*
Moe dep
arr
dep
Trafalgar dep	..	06 24	07 14	08 15	09 14
Yarragon O dep	..	06 32	07 23	08 22*	09 23
Darnum O dep	..	06 39	07 30	08 27*	09 29
WARRAGUL dep
arr	07 39	08 35	09 38
dep	06 05	06 48	07 41	08 36	09 40
Drouin dep	06 11	06 54	07 48	08 42*	09 47
Longwarry ES O dep
arr	06 18	07 01	07 54	08 47*	09 53
Bunyip ES dep
arr	06 22	07 05	07 59	08 50*	09 58
dep	06 26	07 09	08 02	..	10 01
Garfield dep	..	07 13	08 07	..	10 06
Tynong dep	..	07 18	08 12	08 58*	10 11
Nar-Nar-Goon dep
PAKENHAM dep	06 42	07 24	08 19	09 02*	10 18
arr	..	07 28*	08 23*
Officer dep
Beaconsfield dep
Berwick dep	06 50*	07 32*	08 29	09 09*	10 26*
arr	06 53*	07 35*	08 32*	09 12*	10 29*
Narre Warren dep	..	07 37*
Hallam NC dep	..	07 40d
General Motors NC dep
DANDENONG arr	07 01-C
	4014 Suburban Electric				
dep	07 06-A	07 44d	08 39d	09 22d	10 37d
Yarraman dep	07 08
Noble Park dep	07 10
Sandown Park O dep	07 13
Springvale dep	07 15	07 51*	08 45*	09 28*	10 43*
Westall O dep	07 17
Clayton dep	07 20
Huntingdale dep	07 23
Oakleigh dep	07 27	08 00*	08 53*	09 34*	10 49*
Hughesdale dep	07 29
Murrumbena dep	07 31
Carnegie dep	07 33
Caulfield dep	07 36	08 08d	09 01d	09 40d	10 56d
Richmond dep	07 45
FLINDERS STREET arr	07 50	08 25	09 17d	09 57d	11 13d
			8447	8451	8455
DOWN:					
FLINDERS STREET dep	07 54	..	09 18	09 58	11 14
SPENCER STREET arr	07 58	..	09 22	10 02	11 18
Forms/Destination	8403 07 25 TRG	8411 09 15 TRG	8418/19 13 47 TRG	8255 17 00 GLG	8422/23 16 15 TRG

A- Express Caulfield To Richmond.

C- Passengers change.

BAIRNSDALE - SALE - TRARALGON - WARRAGUL - MELBOURNE
Passenger Service

Monday to Friday -continued.

Run No.	E 40	E 42	E 40	20	E 43	E 42	
Formed by Arrival	8403 09 20 DNG	8411 11 40 FSS	8414/15 14 25 SSS	8406/07 12 45 SSS	8418/19 16 05 SSS	8420/21 18 15 SSS	
STATIONS	8456 PASS.	8460 PASS.	8464 PASS.	8468 "The Gipps- lander" ▲	8474 PASS.	8478 PASS.	
UP:							
BAIRNSDALE ES dep.	13 25-D
Hillside NC
Lindenow O	13 40*
Lindenow (General Store)
Lindenow Sth. (Opp. Hotel)
Fernbank (Billabong R'house)
Fernbank ES O	13 50*
Stratford Station
STRATFORD ES arr.
Stratford Junction ES NC dep.	14 10
SALE ES	14 13*
SALE ES arr.	14 27
Rosedale ES dep.	14 35
TRARALGON ES	14 55
arr.	15 17
dep.	10 00	12 50	...	15 25	17 00	18 30	...
Morwell ES	arr.
dep.	10 12	13 02	...	15 37	17 12	18 41	...
Herne's Oak NC	arr.
arr.	10 19*
dep.	10 23*	*	...	15 44*	*	18 47-9441	...
Moe" arr.
dep.	10 30	13 14	...	15 50	17 24	18 53	...
Trafalgar	10 39	13 23	...	15 57*	17 33	19 02	...
Yarragon O	10 45	13 29	...	16 02*	17 39	19 08	...
Darnum O	*	*	...	*	*	*	...
WARRAGUL	arr.	10 54	13 38	16 10	17 48	19 20	...
arr.	10 56	13 40	15 10	16 11	17 50
Drouin	11 02*	13 46	15 16	16 17*	17 56
Longwarry ES O	arr.
dep.	11 07*	13 52	15 23	16 22*	18 02
Bunyip ES	arr.
dep.	11 10*	13 57	15 27	16 25*	18 07
Garfield	...	14 00	15 31	*	18 10
Tynong	*	14 05	15 35	*	18 15
Nar-Nar-Goon	11 18*	14 10	15 41	16 33*	18 20
PAKENHAM	arr.
dep.	11 22*	14 18	15 48	16 37*	18 27
Officer	11 26*	*	15 52*	16 41*	18 31*
Beaconsfield	...	*	*	*	*
Berwick	arr.
dep.	11 30*	14 26*	15 56*	16 45*	18 35*
Narre Warren	11 33*	14 29*	15 59*	16 48*	18 38*
Hallam NC	*	*	*	*	*
General Motors NC
DANDENONG	arr.
dep.	11 40d	14 37d	16 08d	16 58d	18 47d
Yarraman	*	*	*	*	*
Noble Park	*	*	*	*	*
Sandown Park O	*	*	*	*	*
Springvale	11 46*	14 43*	16 14*	17 05*	18 55*
Westall O	*	*	*	*	*
Clayton	*	*	*	*	*
Huntingdale	*	*	*	*	*
Oakleigh	11 52*	14 49*	16 21*	17 14*	19 05*
Hughesdale	*	*	*	*	*
Murrumbeena	*	*	*	*	*
Carnegie	*	*	*	*	*
Caulfield	11 58d	14 56d	16 30d	17 21d	19 14d
Richmond	*	*	*	*	*
FLINDERS STREET	arr.	12 13d	16 52	17 37d	19 29d
DOWN:	8457	8461		8469	8475		
FLINDERS STREET dep.	12 15	15 16	...	17 39	19 30
SPENCER STREET arr.	12 19	15 20	...	17 43	19 34
Forms/Destination	8414/15 12 45 WRG	8420/21 15 40 TRG	8425 17 50 WRG	8430/31 M-Th 8432/33 Fri 18 26 SAL M-Th BDE Fri	8436/37 21 15 TRG	OFF	

MELBOURNE-WARRAGUL-TRARALGON-SALE-BAIRNSDALE - Passenger Service

SATURDAYS

Run No.	E 41	20	E 43	E 41	20		
Formed by Arrival	8440 06 59 WRG	8210 07 40 GLG	8444/45 08 30 TRG	8456/57 12 40 TRG	8468/69 17 44 BDE		
STATIONS	4801 Suburban Electric	8406 "The Gipps- lander" ▲	8414 PASS.	8426 PASS.	8430 PASS. ▲		
UP: SPENCER STREET	dep. ..	08 26 ●	12 27 ●	17 40	18 26 ●
FLINDERS STREET	arr. ..	08 30u	12 31u	17 44u	18 30u
DOWN: FLINDERS STREET	dep. 06 44-A	8407 08 31 ●	8415 12 32 ●	8427 17 46 ●	8431 18 31 ●
Richmond	06 55	*	*	*	*
Caulfield	07 10	08 47u	12 47u	18 02u	18 47u
Carnegie	07 13	*	*	*	*
Murrumbena	07 15	*	*	*	*
Hughesdale	07 16	*	*	*	*
Oakleigh	07 18	08 52*	12 52*	18 07*	18 52*
Huntingdale	07 20	*	*	*	*
Clayton	07 23	*	*	*	*
Westall ○	07 26	*	*	*	*
Springvale	07 29	08 58*	12 58*	18 13*	18 58*
Sandown Park ○	07 31	*	*	*	*
Noble Park	07 33	*	*	*	*
Yarraman	07 36	*	*	*	*
DANDENONG	arr. 07 39-C
	8403 PASS.				
General Motors NC	dep. 07 44	09 06u	13 05u	18 23u	19 06u
Hallam NC	..	*	*	*	*
Narre Warren	07 49*	09 12*	13 11*	18 28*	19 12*
Berwick	07 52*	09 15*	13 14*	18 31*	19 15*
Beaconsfield	..	*	*	*	*
Officer	07 56*	09 19*	13 18*	18 35*	19 19*
PAKENHAM	arr. 08 03	09 23*	13 24	18 42	19 23*
Nar-Nar-Goon	08 09	09 28*	13 31	18 48	19 27*
Tynong	08 15	*	13 36	18 54	*
Garfield	08 19	*	13 41	18 58	*
Bunyip ES	arr. 08 23	09 36*	13 45	19 02	19 35*
Longwarry ES ○	arr. 08 27	09 40*	13 50	19 07	19 39*
Drouin	08 36	09 47*	13 59	19 16	19 46*
WARRAGUL	arr. 08 43	09 54	14 06	19 23	19 52
	dep. 08 45	09 56	14 08	19 25	19 54
Darnum ○	..	*	*	*	*
Yarragon ○	08 55	10 03*	14 17	19 34	20 01*
Trafalgar	09 02	10 08*	14 24	19 41	20 06*
Moe	arr. 09 10	10 16	14 32	19 49	20 15
Herne's Oak NC	arr.
	*	-8456	*	*	*
Morwell ES	dep. ..	10 22*	*	*	*
	arr.
TRARALGON ES	dep. 09 22	10 29	14 44	20 01	20 28
	arr. 09 35	10 41	14 55	20 15	20 40
	dep. ..	10 49	20 48
Rosedale ES	..	11 09	21 08
SALE ES	arr. ..	11 31	21 30-C
	R. COACH
	dep. ..	11 39	21 35
Stratford Junction ES NC	..	11 53*
STRATFORD ES	..	11 57
Stratford Station
Fernbank ES ○	..	12 17*	21 50
Fernbank (Billabong R'house)	22 07
Lindenow South (Opp. Hotel)	22 22
Lindenow (General Store)	22 26
Lindenow ○	..	12 27*	*
Hillside NC	..	*
BAIRNSDALE ES	arr. ..	12 45	22 45
Forms/Destination	8456/57 10 00 SSS	8468/69 13 25 SSS	8472/73 16 15 SSS	OFF	OFF		

- No. 8406/07 may depart Spencer Street 08 25, Flinders Street 08 30.
- No. 8414/15 may depart Spencer Street 12 25, Flinders Street 12 30.
- No. 8426/27 may depart Flinders Street 17 45.
- No. 8430/31 may depart Spencer Street 18 25, Flinders Street 18 30.

A-Stop all stations routed via Spencer Street and City Loop to Richmond and Dandenong.

C-Passengers change.

(E)

BAIRNSDALE - SALE - TRARALGON - WARRAGUL - MELBOURNE - Passenger Service

SATURDAYS

Run No.	E 41	E 43	21	E 41	20	E 43	
Formed by Arrival	ON	ON	ON	8403 09 35 DNG	8406/07 12 45 SSS	8414/15 14 55 SSS	
STATIONS	8440 PASS.	8444 PASS.	8452 PASS. ▲	8456 PASS.	8468 "The Gipps- lander" ▲	8472 PASS.	
UP:							
BAIRNSDALE ES dep.	06 00	..	13 25
Hillside NC	* 06 15*	..	* 13 40*
Lindenow ○
Lindenow (General Store)
Lindenow South (Opp. Hotel)
Fernbank (Billabong R'house)
Fernbank ES ○	06 25*	..	13 50*
Stratford Station
STRATFORD ES arr.
" dep.	06 45	..	14 10
Stratford Junction ES NC	06 48*	..	14 13*
SALE ES arr.	07 02	..	14 27
" dep.	07 10	..	14 35
Rosedale ES	07 30	..	14 55
TRARALGON ES arr.	07 52	..	15 17
dep.	..	06 00	08 00	10 00	15 25	16 15	..
Morwell ES
dep.	..	06 10	08 13	10 11	15 37	16 27	..
Herne's Oak NC	10 17*
arr.	-8407 10 23*
" dep.	..	*	*	..	*	*	..
Moe" arr.
" dep.	..	06 22	08 26	10 30	15 50	16 39	..
Trafalgar	..	06 29	08 34*	10 38	15 57*	16 47	..
Yarragon ○	..	06 35	08 39*	10 45	16 02*	16 54	..
Darnum ○	..	*	*	*	*	*	..
WARRAGUL arr.
dep.	06 00	06 45	08 49	10 55	16 11	17 04	..
Drouin	06 06	06 51	08 55*	11 01	16 17*	17 10	..
Longwarry ES ○
arr.	06 13	06 58	09 00*	11 07	16 22*	17 16	..
Bunyip ES
dep.	06 17	07 02	09 03*	11 11	16 25*	17 20	..
Garfield	06 21	07 07	*	11 15	*	17 24	..
Tynong	06 25	07 10	*	11 19	*	17 28	..
Nar-Nar-Goon	06 31	07 15	09 12*	11 24	16 33*	17 33	..
PAKENHAM arr.
dep.	06 37	07 22	09 16*	11 31	16 37*	17 40	..
Officer	06 42*	07 26*	09 20*	11 35*	16 41*	17 44*	..
Beaconsfield
Berwick
arr.	06 46*	07 30*	09 24*	11 39*	16 45*	17 48*	..
Narre Warren	06 49*	07 33*	09 27*	11 42*	16 48*	17 51*	..
Hallam NC
General Motors NC
DANDENONG arr.	06 59-C
	4012 Suburban Electric						
dep.	07 04-A	07 40d	09 38d	11 52d	16 58d	18 00d	..
Yarraman	07 06	*	*	*	*	*	..
Noble Park	07 08	*	*	*	*	*	..
Sandown Park ○	07 11	*	*	*	*	*	..
Springvale	07 13	07 46*	09 44*	11 58*	17 05*	18 06*	..
Westall ○	07 15	*	*	*	*	*	..
Clayton	07 18	*	*	*	*	*	..
Huntingdale	07 21	*	*	*	*	*	..
Oakleigh	07 24	07 52*	09 52*	12 07*	17 14*	18 12*	..
Hughesdale	07 26	*	*	*	*	*	..
Murrumbeena	07 28	*	*	*	*	*	..
Carnegie	07 30	*	*	*	*	*	..
Caulfield	07 33	07 59d	10 01d	12 15d	17 21d	18 18d	..
Richmond	07 45	*	*	*	*	*	..
FLINDERS STREET arr.	07 49	08 18d	10 17d	12 34d	17 37d	18 34d	..
DOWN:							
FLINDERS STREET dep.	..	8445	8453	8457	8469	8473	..
SPENCER STREET arr.	..	08 26	10 19	12 36	17 40	18 36	..
		08 30	10 23	12 40	17 44	18 40	..
Forms/Destination	8403 07 44 TRG	8414/15 12 27 TRG	8025 13 45 BDG	8426/27 17 40 TRG	8430/31 18 26 SAL	OFF	

A-Stop all stations.

C-Passengers change trains.

MELBOURNE – WARRAGUL – TRARALGON – SALE – BAIRNSDALE – Passenger Service
SUNDAYS

Run No.	20	E 42	E 43				
Formed by Arrival	8226 09 11 GLG	8490/91 10 33 TRG	ON				
STATIONS	8480 PASS. ▲	8484 PASS.	8486 PASS.				
UP: SPENCER STREET	dep. 09 30	17 00	19 00				
FLINDERS STREET	arr. 09 35u	17 04u	19 04u				
DOWN: FLINDERS STREET	dep. 8481 09 37●	8485 17 05	8487 19 06●				
Richmond	09 52u	17 20u	19 21u				
Caulfield	*	*	*				
Carnegie	*	*	*				
Murrumbena	*	*	*				
Hughesdale	*	*	*				
Oakleigh	09 57*	17 25*	19 26*				
Huntingdale	*	*	*				
Clayton	*	*	*				
Westall ○	*	*	*				
Springvale	10 03*	17 31*	19 32*				
Sandown Park ○	*	*	*				
Noble Park	*	*	*				
Yarraman	*	*	*				
DANDENONG	arr. 10 10u	17 38u	19 39u				
General Motors NC	dep. *	*	*				
Hallam NC	*	*	*				
Narre Warren	10 17	17 45	19 46				
Berwick	10 22	17 50	19 51				
Beaconsfield	10 25	17 53	19 54				
Officer	10 30	17 58	19 59				
PAKENHAM	arr. 10 37	18 05	20 05				
Nar-Nar-Goon	dep. 10 43	18 11	20 12				
Tynong	10 49	18 17	20 17				
Garfield	10 53	18 22	20 22				
Bunyip ES	arr. 10 56	18 25	20 26				
Longwarry ES ○	dep. 11 01	18 30	20 31				
Drouin	11 10	18 39	20 40				
WARRAGUL	arr. 11 18	18 47	20 49				
Darnum	dep. 11 20	18 49	20 51				
Yarragon ○	11 30	18 59	21 01				
Trafalgar	11 37	19 06	21 08				
Moe	arr. 11 46	19 14	21 17				
Herne's Oak NC	dep. *	*	*				
Morwell ES	arr. 11 58	19 26	21 29				
TRARALGON ES	dep. 12 12	19 40	21 45				
Rosedale ES	dep. 12 20				
SALE ES	arr. 12 41				
Stratford Junction ES NC	dep. 13 01				
STRATFORD ES	13 09				
Stratford Station	13 23*				
Fernbank ES ○	13 27				
Fernbank (Billabong R'house)	13 49*				
Lindenow South (Opp. Hotel)				
Lindenow (General Store)				
Lindenow ○	13 58*				
Hillside NC	*				
BAIRNSDALE ES	arr. 14 15				
Forms/Destination	8496/97 16 30 SSS	OFF	OFF				

● No. 8480/81 may depart Flinders Street 09 35.
 No. 8486/87 may depart Flinders Street 19 05.

BAIRNSDALE – SALE – TRARALGON – WARRAGUL – MELBOURNE – Passenger Service
SUNDAYS

Run No.	E 42	E 41	20				
Formed by Arrival	ON	ON	8480/81 14 15 SSS				
STATIONS	8490 PASS.	8494 PASS.	8496 PASS. ▲				
BAIRNSDALE ES dep.	16 30
Hillside NC	*
Lindenow ○	16 44*
Lindenow (General Store)
Lindenow South (Opp. Hotel)
Fernbank (Billabong R'house)
Fernbank ES ○	16 54*
Stratford Station
STRATFORD ES arr.
" dep.	17 14
Stratford Junction ES NC	17 17*
SALE ES arr.	17 32
" dep.	17 40
Rosedale ES	18 01
TRARALGON ES arr.	18 22
" dep. 08 00	16 30	..	18 30
Morwell ES arr.
" dep. 08 12	16 42	..	18 42
Herne's Oak NC arr.
" dep. *	*	..	*
Moe arr.
" dep. 08 24	16 54	..	18 54
Trafalgar ..	08 32	17 02	19 02*
Yarragon ○ ..	08 39	17 09	19 07*
Darnum ○ ..	*	*	*
WARRAGUL arr.	17 18	19 16
" dep. 08 49	17 20	..	19 18
Drouin ..	08 56	17 27	19 24
Longwarry ES ○ arr.
" dep. 09 02	17 33	..	19 29*
Bunyip ES arr.
" dep. 09 07	17 38	..	19 32*
Garfield ..	09 10	17 41	*
Tynong ..	09 15	17 46	*
Nar-Nar-Goon ..	09 20	17 51	19 41*
PAKENHAM arr.
" dep. 09 27	17 58	..	19 45*
Officer ..	09 33	18 04	19 49*
Beaconsfield ..	09 38	18 08	*
Berwick arr.
" dep. 09 42	18 12	..	19 53*
Narre Warren ..	09 46	18 15	19 56*
Hallam NC ..	*	*	*
General Motors NC ..	*	*	*
DANDENONG arr.
" dep. 09 54d	18 26d	..	20 06d
Yarraman ..	*	*	*
Noble Park ..	*	*	*
Sandown Park ○ ..	*	*	*
Springvale ..	10 00*	18 32*	20 12*
Westall ○ ..	*	*	*
Clayton ..	*	*	*
Huntingdale ..	*	*	*
Oakleigh ..	10 06*	18 38*	20 18*
Hughesdale ..	*	*	*
Murrumbena ..	*	*	*
Carnegie ..	*	*	*
Caulfield ..	10 12d	18 44d	20 24d
Richmond ..	*	*	*
FLINDERS STREET arr. 10 28d	18 59d	20 39d
DOWN: 8491	8495	8497
FLINDERS STREET dep. 10 29	19 01	20 41
SPENCER STREET arr. 10 33	19 05	20 45
Forms/Destination	8484/85 17 00 TRG	OFF	8285 22 05 GLG				

TRARALGON-MAFFRA.
Road Coach Service.

DOWN

STATIONS			8406/07 "The Gipps-lander" Mon. to Sat. ▲	8430/31 Pass. Mon. to Thur. 8432/33 Fri. ▲	8430/31 Pass. Sat. ▲			
MELBOURNE- (Spencer Street)	dep.	..	08 26●	18 26●	18 26●
TRARALGON	arr.	..	10 41C Road Coach	20 48C Road Coach	20 40C Road Coach
			10 55	21 00	20 50
Glengarry (Opposite R.S.)	dep.	..	11 12	21 17	21 07
"	arr.	..	11 23	21 28	21 18
Toongabbie (Local Store)	dep.	..	11 32	21 37	21 27
Cowwarr (General Store)	arr.	..	11 44	21 49	21 39
Heyfield Town (Temple Street, South side of Harbeck St.)	dep.
Heyfield (Railway Station)	arr.
"	dep.	..	11 46	21 51	21 41
Tinamba (General Store)	arr.
"	dep.	..	11 57	22 02	21 52
Maffra Town (Johnson St., West side of Pearson St.)	arr.	..	12 03	22 08	21 58
MAFFRA (Railway Station)	arr.	..	12 05	22 10	22 00

MAFFRA-TRARALGON.
Road Coach Service.

UP

STATIONS			Road Coach Mon. to Fri.	Road Coach Sat.	Road Coach Mon. to Sat.			
MAFFRA (Railway Station)	dep.	..	06 30	06 40	14 05
Maffra Town (Johnson St., West side of Pearson St.)	arr.	..	06 32	06 42	14 07
Tinamba (General Store)	dep.	..	06 41	06 49	14 16
"	arr.	..	06 54	07 02	14 29
Heyfield (Railway Station)	dep.	..	06 56	07 04	14 31
Heyfield Town (Temple Street, South side of Harbeck St.)	arr.
Cowwarr (General Store)	dep.	..	07 06	07 14	14 41
"	arr.	..	07 17	07 25	14 52
Toongabbie (Local Store)	dep.	..	07 28	07 34	15 03
Glengarry (Opposite R.S.)	arr.	..	07 40C	07 50C	15 15C
TRARALGON	arr.
			8450/51 Pass. Mon. to Fri. ▲	8452/53 Pass. Sat. ▲	8468/69 "The Gipps-lander" ▲			
"	dep.	..	07 50	08 00	15 25
MELBOURNE- (Spencer Street)	arr.	..	10 02	10 23	17 43 (17 44 Sat.)

●-No. 8406/07 may depart Spencer Street 08 25.

Nos. 8430/31 and 8432/33 may depart Spencer Street 18 25.

C-Passengers change.

For intermediate times between Melbourne and Traralgon see pages 6 to 11.

Road Coach Operator-Latrobe Valley Bus Lines, 4-10 Ryan St., Morwell. Telephone (051) 34 2055.

(Reserved)

**SPENCER STREET-LEONGATHA-YARRAM
ROAD COACH SERVICE**

Down

		Road Coach Mon. to Fri.	Road Coach Sat.		Road Coach Sat.		Road Coach Mon. to Fri.	Express Road Coach Mon. to Fri.
MELBOURNE (Spencer St.) (Inner Roadway)	dep.	09 50	09 50	..	12 25	..	15 35	16 10
SUBN. ELEC. CONNECTION								
Flinders Street (Platform No.)	dep.	09 52 (6)	09 44 (7)	..	12 24 (7)	..	15 37 (7)	..
Caulfield	..	10 10	10 10	..	12 50	..	16 03	..
Oakleigh	..	10 18	10 18	..	12 58	..	16 11	..
Dandenong	arr.	10 39c	10 39c	..	13 19c	..	16 32c	..
Dandenong R.S. (Station Bus Stop)	arr.	10 40	10 40	..	13 23	..	16 36	..
Cranbourne T.S. (Adjacent to B.P. Garage High St.)	dep.	10 45	10 45	..	13 26	..	16 40	..
Clyde T.O.	..	11 02P	11 02P	..	13 41	..	16 57P	..
Tooradin T.S. (Bus Shelter, Main St.)	..	♦	♦	..	♦	..	♦	..
Koo-wee-rup	..	11 14	11 14	..	13 54	..	17 13	..
Lang Lang T.S. (Bus Stop Main Street)	..	11 24	11 24	..	14 04	..	17 23	..
Nyora T.S. (General Store)	..	11 35	11 35	..	14 14	..	17 35	..
Loch T.S. (Loch Service Station)	..	11 51	11 51	..	14 28	..	17 50	..
Korumburra R.S.	..	12 01	12 01	..	14 38	..	18 00	..
LEONGATHA R.S.								
Meeniyan T.S. (Opposite State Bank)	arr.	12 14	12 14	..	14 51	..	18 13K	18 13K
Buffalo T.O.	dep.	12 17	12 17	..	14 53	..	18 16	18 15
Fish Creek T.S. (B.P. Garage)	arr.	12 35	12 35	..	15 10	..	18 32	18 30
Foster T.S. (Adjacent to Post Office)	dep.	18 34	18 32
Toora T.S. (Toora Guest House)	18 50	18 47
Welshpool T.S. (Milk Bar)	18 59	..
Alberton T.S. (Adjacent to Alberton Store)	19 10	..
YARRAM R.S.	arr.	19 09
								19 22
								19 32
								19 48
								19 55
		Road Coach Mon. to Fri.	Road Coach Sat.	Express Road Coach Fri., Sat. only		Road Coach Sun.	Express Road Coach Sun.	
MELBOURNE (Spencer St.) (Inner Roadway)	dep.	18 30	18 30	19 00	..	20 30	20 55	..
SUBN. ELEC. CONNECTION								
Flinders Street (Platform No.)	dep.	18 23 (6)	18 24 (6)	20 25 (8)
Caulfield	..	18 49	18 50	20 43
Oakleigh	..	18 57	18 58	20 51
Dandenong	arr.	19 18c	19 19c	21 12c
Dandenong R.S. (Station Bus Stop)	arr.	19 20	19 20	21 15
Cranbourne T.S. (Adjacent to B.P. Garage High St.)	dep.	19 25	19 25	21 17
Clyde T.O.	..	19 39P	19 39	21 31
Tooradin T.S. (Bus Shelter, Main St.)	..	♦	♦	♦
Koo-wee-rup	..	19 52	19 52	21 43
Lang Lang T.S. (Bus Stop Main Street)	..	20 01	20 01	21 53
Nyora T.S. (General Store)	..	20 10	20 10	22 03
Loch T.S. (Loch Service Station)	..	20 23	20 23	22 17
Korumburra R.S.	..	20 32	20 32	22 27
LEONGATHA R.S.								
Meeniyan T.S. (Opposite State Bank)	arr.	20 44K	20 44K	20 48K	..	22 40K	22 40K	..
Buffalo T.O.	dep.	20 50	20 50	20 50	..	22 42	22 42	..
Fish Creek T.S. (B.P. Garage)	arr.	21 05	21 05	21 05	..	22 55	22 55	..
Foster T.S. (Adjacent to Post Office)	dep.	22 57	..
Toora T.S. (Toora Guest House)	23 11	..
Welshpool T.S. (Milk Bar)	23 19	..
Alberton T.S. (Adjacent to Alberton Store)	23 28	..
YARRAM R.S.	arr.	23 42	..
							23 54	..
							00 05 Mon.	..
							00 21	..
							00 30	..

c - Passengers change.

K - Connection between Express and Stopping Services.

P - Pick up only.

R.S. - Railway Station.

T.O. - Road Turn Off.

T.S. - Township.

Road Operator : Eldred Coaches, 28 Parr Street, Leongatha, Phone (056) 62 2891.

**YARRAM-LEONGATHA-SPENCER STREET
ROAD COACH SERVICE**

Up

		Road Coach Mon. to Fri.	Road Coach Sat.		Express Road Coach Mon. to Sat.		Road Coach Mon. to Fri.	Road Coach Sat.
YARRAM	dep.	07 00
Alberton T.S. (Adjacent to Alberton Store)	07 07
Welshpool T.S. (Milk Bar)	07 25
Toora T.S. (Opposite Toora Guest House)	07 36
Foster T.S. (Adjacent to Post Office)	07 49
Fish Creek T.S. (Promontory Gate Hotel)	*	..	07 50	07 50
Buffalo T.O.	*	..	07 57	07 57
Meeniyah T.S. (State Bank)	08 09	..	08 06	08 06
LEONGATHA R.S.	arr.	08 24	..	08 22	08 22
Korumburra R.S.	dep. arr.	06 10 06 25	06 10 06 25	..	08 26 08 42K	..	08 24 08 42K	08 24 08 42K
Loch T.S. (Opposite Loch Service Station)	..	06 28 06 41	06 27 06 40	..	08 45	..	08 45 08 58	08 45 08 58
Nyora T.S. (General Store)	..	06 51	06 50	..	*	..	09 08	09 08
Lang Lang T.S. (Main Street Bus Stop)	..	07 07	07 05	..	*	..	09 25	09 25
Koo-wee-rup T.S.	..	07 22	07 18	..	*	..	09 40	09 40
Tooradin T.S. (Bus Shelter Main Street)	..	07 32	07 28	..	*	..	09 51	09 51
Clyde T.O.	..	♦	♦	..	*	..	♦	♦
Cranbourne (Bus Shelter High Street)	..	07 47S	07 41S	..	*	..	10 04S	10 04S
Dandenong R.S. (Station Bus Stop)	arr. dep.	08 02c 08 05	07 58c 08 00	10 19c 10 21	10 19c 10 21
SUBN. ELEC. CONNECTION	dep.	08 14	08 04	10 24	10 24
Dandenong	..	08 34	08 24	10 44	10 44
Oakleigh	..	08 43	08 33	10 53	10 53
Caulfield	arr.	08 57	08 49	11 17	11 09
Flinders Street (Platform No.)	..	(9)	(7)	(8)	(7)
MELBOURNE (Spencer St.) (Inner Roadway)	arr.	09 05	08 45	..	10 40	..	11 15	11 15
		Road Coach Mon. to Fri.	Road Coach Sat.		Express Road Coach Fri.		Express Road Coach Sun.	Road Coach Sun.
YARRAM	dep.	15 45	..
Alberton T.S. (Adjacent to Alberton Store)	15 52	..
Welshpool T.S. (Milk Bar)	16 10	..
Toora T.S. (Opposite Toora Guest House)	16 21	..
Foster T.S. (Adjacent to Post Office)	16 34	..
Fish Creek T.S. (Promontory Gate Hotel)	16 50	..
Buffalo T.O.	16 57	..
Meeniyah T.S. (State Bank)	17 07	..
LEONGATHA R.S.	arr.	17 23	..
Korumburra R.S.	dep. arr.	15 10 15 25	15 25 15 40	..	16 00 16 15	..	17 26 17 42K	17 25 17 40K
Loch T.S. (Opposite Loch Service Station)	..	15 28 15 41	15 43 15 56	..	16 17	..	17 44	17 44
Nyora T.S. (General Store)	..	15 50	16 05	..	*	..	*	18 07
Lang Lang T.S. (Main Street Bus Stop)	..	16 06	16 21	..	*	..	*	18 23
Koo-wee-rup T.S.	..	16 19	16 34	..	*	..	*	18 38
Tooradin T.S. (Bus Shelter Main Street)	..	16 29	16 44	..	*	..	*	18 48
Clyde T.O.	..	♦	♦	..	*	..	*	♦
Cranbourne (Bus Shelter High Street)	..	16 42S	16 57	..	*	..	*	19 03
Dandenong R.S. (Station Bus Stop)	arr. dep.	16 58c 17 00	17 13c 17 15	19 00c 19 03	19 22c 19 25
SUBN. ELEC. CONNECTION	dep.	17 08A	17 24	19 30	19 30
Dandenong	..	17 24	17 44	19 50	19 50
Oakleigh	..	17 30	17 53	19 59	19 59
Caulfield	arr.	17 43	18 09	20 15	20 15
Flinders Street (Platform No.)	..	(6)	(6)	(9)	(9)
Caulfield R.S.	..	*	*	..	*	..	19 30S	19 52S
MELBOURNE (Spencer St.) (Inner Roadway)	arr.	17 55	18 05	..	18 10	..	19 50	20 10

A - Stops Springvale, Oakleigh, Caulfield, Malvern, Richmond only.
C - Passengers change.
K - Connection between Express and Stopping Services.
R.S. - Railway Station.
S - Set down only.
T.O. - Road Turn Off.
T.S. - Township.

MELBOURNE-DANDENONG-WONTHAGGI-INVERLOCH BUS SERVICE
CO-ORDINATED RAIL AND ROAD BUS SERVICE.

Down

		4063 Subn. Elec. Mon. to Fri.	4815 Subn. Elec. Sat. (via Loop)	4845 Subn. Elec. Mon. to Fri.	4869 Subn. Elec. Sat.	4029 Subn. Elec. Sun.		
FLINDERS STREET	dep.	09 17	09 04	18 03	18 04	18 25	..	
CAULFIELD	..	09 32	09 30	18 29	18 30	18 43	..	
DANDENONG	arr.	10 01C	09 59C	18 58C	18 59C	19 12C	..	
(Railway Station)								
		Road Coach		Road Coach		Road Coach		
	dep.	10 10		19 05		19 20	..	
CRANBOURNE	..	10 26P		19 21P		19 36P	..	
(Bus Stop in High St. adjacent to B.P. Garage)								
TOORADIN	..	10 37P		19 32P		19 47P	..	
(Bus Shelter in Main St.)								
LANG LANG	arr.	10 55P		19 50P		20 05P	..	
(Comfort Station)	dep.	11 00		19 55		20 10	..	
THE GURDIES	..	11 11		20 06		20 21	..	
(Western View Cafe – for Woodleigh and Kernot)								
GRANTVILLE (Post Office – for Almurta)	..	11 17		20 12		20 27	..	
CORINELLA TURN-OFF	..	11 22		20 17		20 32	..	
(Shady Park Cafe)								
BASS (Seagull Inn – for Woolamai and Anderson)	..	11 28		20 23		20 38	..	
KILCUNDA	..	11 39		20 34		20 49	..	
(Opposite Railway Station)								
DALYSTON	..	11 46		20 41		20 56	..	
(Bass Shire Hall)								
WONTHAGGI	arr.	11 54		20 49		21 04	..	
(Public Library, Cnr. McBride Av. and Watt St.)	dep.	11 57		20 52		21 07	..	
ONE STOP SHOP	..	12 00		20 55		21 10	..	
(78 Graham St.)								
INVERLOCH	arr.	12 10		21 00		21 20	..	
(Ampol S/S, Beach Rd.)								

C – Passengers change.

P – Pick-up only.

**INVERLOCH-WONTHAGGI-DANDENONG-MELBOURNE BUS SERVICE
CO-ORDINATED RAIL AND ROAD BUS SERVICE.**

Up

		Road Coach Mon. to Fri.	Road Coach Sat.	Road Coach Mon. to Sat.	Road Coach Sun.		
INVERLOCH	dep.	07 40	07 40	15 50	16 40		
(Ampol S/S Beach Road)							
WONTHAGGI (Public	arr.	07 52	07 52	16 02	16 52		
Library Cnr. McBride Av.							
and Watt St.)	dep.	07 55	07 55	16 05	16 55		
ONE STOP SHOP		07 58	07 58	16 08	16 58		
(78 Graham St.)							
DALYSTON		08 06	08 06	16 16	17 06		
(Bass Shire Hall)							
KILCUNDA		08 13	08 13	16 23	17 13		
(Opposite Railway Station)							
BASS (Seagull Inn –		08 26	08 25	16 36	17 26		
for Woolamai and Anderson)							
CORINELLA TURN-OFF		08 33	08 32	16 43	17 33		
(Shady Park Cafe)							
GRANTVILLE (Post Office –		08 37	08 35	16 47	17 37		
for Almurta)							
THE GURDIES		08 43	08 40	16 53	17 43		
(Western View Cafe –							
for Woodleigh and Kernot)							
LANG LANG	arr.	08 55S	08 52S	17 05S	17 55S		
(Comfort Station)	dep.	09 00	08 57	17 10	18 00		
TOORADIN		09 14S	09 10S	17 24S	18 14S		
(Bus Shelter in Main St.)							
CRANBOURNE		09 25S	09 20S	17 35S	18 25S		
(Bus Stop in High St. adjacent							
to B.P. Garage)							
DANDENONG	arr.	09 40C	09 35C	17 50C	18 40C		
		4620	4034	4092	4110	4032	
		Subn. Elec.	Subn. Elec.	Subn. Elec.	Subn. Elec.	Subn. Elec.	
				Mon. to Fri.	Sat.		
CAULFIELD	dep.	09 45	09 44	18 00	18 04	18 50	
FLINDERS STREET		10 05	10 13	18 26	18 33	19 19	
	arr.	10 32	10 29	18 39	18 49	19 35	

Railway fares and tickets will be used for the Road Coach Service.

Tickets can be purchased in Wonthaggi at "ONE STOP SHOP", 78 Graham Street and in Inverloch at Harmers Ampol Garage, Beach Road.

C – Passengers change.

S – Set down only.

Road Operator:– Grendas Bus Service, 9 Foster Street, Dandenong. Phone (03) 791 2988.

(Reserved)

(Reserved)

**MELBOURNE-WARRAGUL-YALLOURN-MORWELL BRIQUETTE SIDING-TRARALGON-MAFFRA-
BAIRNSDALE AND TRARALGON-SALE
GOODS SERVICE**

Down

STATIONS		9405 Through Goods Tue. to Fri.	9407 Through Goods Mon. only	9409 Through Goods Mon. to Fri. (Sat. ††)	9411 Through Goods Tue. to Fri. (Sat. ††)	9413 Roadside Goods Tue., Thur. (Mon., Wed., Fri., Sat. ††)	9415 Through Goods Mon. to Fri. (Sat. ††)	
Maribyrnong River Terminal	dep.	01 00A	01 40A	..	05 00	..
MELBOURNE YARD	dep.
East Yard	dep.	00 20	00 30	01 24	02 10	..	05 26	..
Viaduct Junction (No. 2)	dep.	00 30	00 40
Flinders Street	arr.	00 35	..	01 28	02 15	..	05 30	..
"	dep.	01 15	00 45	05 53	..
Caulfield "	arr.	01 48	02 36	..	06 15	..
"	dep.	01 29	01 03
Oakleigh	arr.	01 54	02 42	..	06 21	..
"	dep.	01 34	01 08
Westall ○	arr.
"	dep.
Springvale	arr.
"	dep.
Dandenong	arr.	-9478	06 40	..
"	dep.	01 46	01 27	02 10	03 01	..	07 40	..
General Motors NC	arr.
"	dep.
Narre Warren	arr.	02 20	03 12	..	07 51	..
"	dep.	01 52	01 37
Berwick "	arr.	02 24	03 17	..	07 56	..
"	dep.	01 55	01 42
Officer	arr.	02 30	03 23	..	08 02	..
"	dep.	..	01 48
Pakenham	arr.	02 36	03 29	..	08 08	..
"	dep.	02 05	01 54
Nar-Nar-Goon	arr.	02 11	..	02 42	03 45	..	08 15	..
"	dep.	02 13	02 00
Tynong "	arr.
"	dep.
Garfield	arr.
"	dep.
Bunyip ES	arr.	02 24	..	02 55	-9472 03 48	..	08 28	..
"	dep.	02 27	02 13	-8450	..
Longwarry ES	arr.	02 59-9428	03 53	..	08 33	..
"	dep.	02 31	02 18
Drouin	arr.	02 38	..	03 07	04 04	..	08 45	..
"	dep.	02 41	02 27
WARRAGUL	arr.	02 48	..	03 17	04 13	..	08 55	..
"	dep.	02 54	02 35
Caltex Siding NC
Darnum ○
Yarragon	arr.	03 05-9472	..	03 31	04 26	..	09 08	..
"	dep.	03 07	02 48
Trafalgar	arr.	03 14	..	03 39	04 34	..	09 17	..
"	dep.	03 19	02 56	03 50	04 45
Moe †	arr.	03 27	03 07-9430
"	dep.	03 30	03 15	04 05	05 00	..	09 30	..
YALLOURN †	arr.
Herne's Oak NC	arr.	-9444 09 38	..
"	dep.	03 36	03 21	04 15	05 10
Morwell ES	arr.	03 43	03 30	..	05 17
"	dep.	03 46	03 50	04 22	05 35	..	09 45	..
Morwell Briquette Siding	arr.	04 32	09 55-716	..
Up								
Morwell Briquette Siding	dep.	Light Loco.†† 04 50-9432	Light Loco.†† 10 25	..
Morwell ES	arr.	05 00	10 35	..
Down								
Morwell	dep.	05 13	-8407 10 44	..
Hazelwood Siding NC	arr.
"	dep.
Maryvale NC ES	arr.	..	04 00-9432
"	dep.	..	04 30
Morwell Shire Ind. Siding NC
TRARALGON ES	arr.	04 00	04 40	05 30	05 50	..	11 00	..
"	Mon., Wed., Fri. (Tue., Thur., Sat. ††)
Glengarry NC	dep.	07 45	09 10
"	arr.	09 25
Cowwarr ○ ES	dep.	07 59	09 40
"	arr.	10 08
Heyfield ES	dep.	08 22	10 25
"	arr.	10 45
Tinamba ○ ES	dep.	08 36	11 15
"	arr.	11 28
MAFFRA ES	arr.	08 46	11 40
"	dep.	12 00
Stratford Junction NC ES	09 05
STRATFORD ES	arr.	09 15
"	09 20
Fernbank ○ ES	dep.	Roadside Goods
"	arr.	09 40
Lindenow ○	dep.	10 03
"	arr.	10 30
Hillside NC	10 45
S.E.C. Siding NC	11 00
Bairnsdale Oil Siding NC
BAIRNSDALE ES	arr.	11 20-8407
TRARALGON ES	dep.
Traralgon Livestock Siding NC
Rosedale ES	arr.
SALE ES	dep.
"	arr.
		9405	9407	9409	9411	9413	9415	

A - May originate at another Metropolitan Terminal as arranged by Manager, Country Train Scheduling and Control.

(E).

**MELBOURNE-WARRAGUL-YALLOURN-MORWELL BRIQUETTE SIDING-TRARALGON-MAFFRA-
BAIRNSDALE AND TRARALGON-SALE
GOODS SERVICE-continued.**

Down

STATIONS		9417 Goods Mon. to Fri. ††	9419 Goods Mon. to Fri. ††	9423 Roadside Goods Mon. to Fri.	9425 Through Goods Mon. to Fri. (Sat. ††)	9427 Through Goods Mon. to Fri. (Sat. ††)	9429 Through Goods Tue., Fri. ††
Maribyrnong River Terminal	dep.	10 25A	11 40-B	. . .
MELBOURNE YARD	dep.	14 00
East Yard	dep.	10 00
Viaduct Junction (No. 2)	dep.	10 23	11 00	12 20	14 17
Flinders Street	arr.
Caulfield "	dep.	10 27	11 04	12 25	14 21
Oakleigh	arr.	12 44	. . .
Westall O	dep.	10 53	11 24	13 20	14 40
Springvale	arr.	11 02	11 32	13 27	14 48
Dandenong	dep.
General Motors NC	arr.	11 23	11 48
Narre Warren	dep.	11 50	12 10	13 47	15 05
Berwick "	arr.
Officer	dep.	12 00	12 20	13 57	15 16
Pakenham	arr.	12 05	12 25	14 02	15 21
Nar-Nar-Goon	dep.	12 12	12 31	14 08	15 28
Tynong "	arr.	12 30
Garfield	dep.	12 45-9425	12 37-9423	14 14	15 33
Bunyip ES	arr.	12 52	12 43	14 20	15 39
Longwarry ES	dep.
Drouin	arr.	13 05
WARRAGUL	dep. . .	From Morwell Briquette Siding (Page 30)	From Yallourn (Page 30)	13 20-9452	12 56	14 33	15 52
Caltex Siding NC	arr.	13 25
Darnum O	dep.	13 35	13 01-9454	14 38	15 57
Yarragon	arr.	13 45
Trafalgar	dep.	14 00	13 10	14 47	16 06
Moe †	arr. . .	11 40	14 50	14 10-8415	13 20	14 58-8419	16 16
"	dep. . .	13 00	15 15	14 30	. . .	15 25	16 16
YALLOURN †	arr. . .	13 20
Herne's Oak NC	dep.	15 25	16 37	. . .	16 17	16 53
Morwell ES	arr.	16 48-8474 9429	17 03-9423, 9427, 8474
Morwell Briquette Siding	dep.	15 32	17 15	14 15-9458	16 26	17 32
"	arr.	15 40	. . .	14 25	16 35	. . .
Up			Light Loco. ††		Light Loco. ††	Light Loco. ††	
Morwell Briquette Siding	dep.	16 00	. . .	14 35	16 50	. . .
Morwell ES	arr.	16 10	. . .	14 45	17 00	. . .
Down							
Morwell	dep.	16 15	. . .	14 50	Attach to No. 9423	. . .
Hazelwood Siding NC	arr.
Maryvale NC ES	dep.
Morwell Shire Ind. Siding NC	arr.
TRARALGON ES	dep.	16 30-9462	17 30	15 05-8468	. . .	17 46
"	arr.	18 40
Glengarry NC	dep.	18 56
Cowwarr O ES	arr.	19 20
Heyfield ES	dep.	19 34
Tinamba O ES	arr.	19 44
MAFFRA ES	dep.	19 54
Stratford Junction NC ES	arr.	20 07
STRATFORD ES	dep.	20 11-9476
Fernbank O ES	arr.	20 40
Lindenow O	dep.	21 15
Hillside NC	arr.	21 28
S.E.C. Siding NC	dep.
Bairnsdale Oil Siding NC	arr.
BAIRNSDALE ES	dep.	21 50
TRARALGON ES	arr.	-9430
Traralgon Livestock Siding NC	dep.	To Orbost
Rosedale ES	arr.
SALE ES	dep.
		9417	9419	9423	9425	9427	9429

A - May originate at another Metropolitan Terminal as arranged by Manager, Country Train Scheduling and Control.
B - Maximum speed 95 km/h.

**MELBOURNE-WARRAGUL-YALLOURN-MORWELL BRIQUETTE SIDING-TRARALGON-MAFFRA-
BAIRNSDALE AND TRARALGON-SALE
GOODS SERVICE-continued.**

Down

STATIONS		9431 Loco & Brakevan Mon. to Fri.		9441 Express Goods Mon. to Fri. (Sat. ††)		9447 Goods Mon. to Thur.		9447 Goods Fri.
Maribyrnong River Terminal	dep.	15 10 B	..	15 10	..	15 10
MELBOURNE YARD	dep.	15 10	..	15 10
East Yard	dep.	14 55	15 23	..	15 23
Viaduct Junction (No. 2)	dep.	15 08	..	15 48	..	15 28	..	15 28
Flinders Street	arr.	15 43	..	15 43
Caulfield "	dep.	15 12	..	15 53	..	15 50	..	15 50
"	arr.	16 13	..	16 00	..	16 00
Oakleigh	dep.	15 35	..	16 22	..	Through Goods	..	Through Goods
Westall O	dep.	15 45	..	16 30	..	16 45	..	16 45
"	arr.	16 50	..	16 50
Springvale	dep.	16 59	..	16 59
"	arr.	17 10	..	17 10
Dandenong	dep.	16 05	..	16 54	..	17 55	..	17 55
"	arr.
General Motors NC	dep.
Narre Warren	arr.
"	dep.	16 15	..	17 04	..	18 06	..	18 06
Berwick "	arr.	16 20	18 11	..	18 11
"	dep.	17 08	..	18 17	..	18 17
Officer	arr.	18 23	..	18 23
"	dep.	17 15	..	18 29	..	18 29
Pakenham	arr.
"	dep.	17 22
Nar-Nar-Goon	arr.
"	dep.	17 27
Tynong "	arr.
"	dep.
Garfield	arr.
"	dep.
Bunyip ES	arr.	17 39	..	18 42	..	18 42
"	dep.	18 47	..	18 47
Longwarry ES	arr.	17 44	..	18 58	..	18 58
"	dep.	19 10	..	19 10
Drouin	arr.	17 53
"	dep.	18 00
WARRAGUL	arr.
"	dep.	19 23	..	19 23
Caltex Siding NC	19 31	..	19 31
Darnum O	19 45	..	19 45
Yarragon	arr.	18 16	..	-9462	..	-9462
"	dep.	19 55	..	19 55
Trafalgar	arr.	18 24
"	dep.
Moe †	arr.	18 34
"	dep.
YALLOURN †	arr.
Herne's Oak NC	arr.	18 40-8420	..	20 05	..	20 05
"	dep.	18 48	..	20 12-8431,	..	20 12-8431
Morwell ES	arr.	8433, 9474	..	8433, 9474
"	dep.	18 55	..	20 55	..	20 55
"	arr.	19 05
Morwell Briquette Siding	arr.
Up				Light Loco.††				
Morwell Briquette Siding	dep.	19 15
Morwell ES	arr.	19 25
Down				-9470				
Morwell	dep.	19 50
Hazelwood Siding NC	arr.
"	dep.
Maryvale NC ES	arr.
"	dep.
Morwell Shire Ind. Siding NC
TRARALGON ES	arr.	20 05-9474	..	21 10-9476, -9478	..	21 10 -9478
"
"	dep.	22 20	..	23 25
Glengarry NC	arr.	22 34	..	23 39
"	dep.
Cowwarr O ES	arr.	23 00	..	00 05 Sat.
"	23 17	..	00 22
Heyfield ES	dep.	23 27	..	00 32
"	arr.	23 40
Tinamba O ES	dep.	-9430 Tue. to Fri.	..	-9430
"	arr.	00 05	..	00 45
MAFFRA ES	00 18	..	00 57
"	dep.	00 25	..	01 02
Stratford Junction NC ES	arr.	01 02	..	01 35
STRATFORD ES	dep.	01 16	..	01 49
"	arr.
Fernbank O ES	dep.	01 40	..	02 15
"	arr.
Lindenow O
"	dep.
Hillside NC
S.E.C. Siding NC
Bairnsdale Oil Siding NC
BAIRNSDALE ES	arr.
TRARALGON ES	dep.	To Orbost
Traralgon Livestock Siding NC
Rosedale ES	arr.
"	dep.
SALE ES	arr.
		9431		9441		9447		9447

B - Maximum speed 95 km/h.

(E)

**MELBOURNE-WARRAGUL-YALLOURN-MORWELL BRIQUETTE SIDING-TRARALGON-MAFFRA-
BAIRNSDALE AND TRARALGON-SALE
GOODS SERVICE-continued.**

Down

STATIONS		9453 Through Goods Mon. to Thur.	9453 Through Goods Fri.	9457 Through Goods Mon. to Fri.	9459 Through Goods Mon. to Fri.			
Port Melbourne	dep.	18 40	18 40	..	20 45
MELBOURNE YARD	dep.
East Yard	dep.	18 49	18 49	20 10
Viaduct Junction (No. 2)	20 20
Flinders Street	arr.	18 54	18 54	20 25	20 55
Caulfield "	arr.
Oakleigh	dep.	19 15	19 15	20 55	21 14
"	arr.	19 23	19 23	..	21 24-8437
Westall O	dep.	19 57	19 57	21 02	21 50
"	arr.
Springvale	dep.
"	arr.
Dandenong	dep.	21 25-8437	22 10-9462
"	arr.	22 00	22 40
General Motors NC	dep.	20 16	20 16
"	arr.
Narre Warren	dep.
"	arr.
Berwick "	dep.	20 27	20 27	22 11	22 51
"	arr.
Officer	dep.	20 32	20 32	22 16	22 56
"	arr.
Pakenham	dep.	20 38	20 38	22 22	23 02
"	arr.
Nar-Nar-Goon	dep.	20 44	20 44	22 28	23 08
"	arr.
Tynong "	dep.	20 50	20 50	22 34	23 13
"	arr.
Garfield	dep.
"	arr.
Bunyip ES	dep.	21 02	21 02	22 47	23 27
"	arr.
Longwarry ES	dep.	21 07	21 07	22 52	23 33
"	arr.
Drouin	dep.	21 16	21 16	23 03	23 52
"	arr.	23 15	23 55-9478
WARRAGUL	Tues. to Sat.
Caltex Siding NC	dep.	21 25	21 25	23 30	00 09
"	arr.
Darnum O
Yarragon	arr.
"	dep.	21 38	21 38	23 43	00 23
Trafalgar	arr.
"	dep.	21 46	21 46	23 51	00 31
"	Tue. to Sat.
Moe †	arr.	00 02-9476
"	dep.	21 57	21 57	00 20	00 46
YALLOURN †	arr.
Herne's Oak NC	arr.
"	dep.	22 07	22 07	00 30	00 56
Morwell ES	arr.	22 15	22 15	..	01 03
"
Morwell Briquette Siding	dep.	22 55	22 55	00 37	01 35
"	arr.
Up
Morwell Briquette Siding	dep.
Morwell ES	arr.
Down
Morwell	dep.
Hazelwood Siding NC	arr.
"	dep.
Maryvale NC ES	arr.	23 05	23 05	..	01 43
"
Morwell Shire Ind. Siding NC	dep.	00 05	00 05	00 55-9472	02 15
TRARALGON ES	arr.	00 15-9430	00 15-9430	..	02 25
"	..	Mon. to Fri.	Sat. ††
"	dep.	01 45	02 30
Glengarry NC	arr.
"	dep.	01 59	02 54
Cowwarr O ES	arr.
"	dep.	02 25	03 20
Heyfield ES	arr.
"	dep.	02 42	03 37
Tinamba O ES	arr.
"	dep.	02 52	03 47
MAFFRA ES	arr.
"	dep.	03 01	03 56
Stratford Junction NC ES	arr.	03 14	04 09
STRATFORD ES
"	dep.	03 18	04 13
Fernbank O ES	arr.
"	dep.	03 53	04 48
Lindenow O	arr.
"	dep.	04 05	05 00
Hillside NC
S.E.C. Siding NC
Bairnsdale Oil Siding NC
BAIRNSDALE ES	arr.	04 25	05 20	Mon. to Fri. (Sat. ††)
TRARALGON ES	dep.	04 00
Traralgon Livestock Siding NC
Rosedale ES	arr.	04 38
"	dep.	05 02
SALE ES	arr.	05 45
		9453	9453	9457	9459			

**SALE-TRARALGON AND BAIRNSDALE-MAFFRA-TRARALGON-MORWELL BRIQUETTE SIDING-
YALLOURN-WARRAGUL-MELBOURNE
GOODS SERVICE-continued.**

Up

STATIONS		9474 Through Goods Mon. to Fri.	9458 Roadside Goods Mon. to Fri.	9470 Roadside Goods Mon. to Fri.		9414 Roadside Goods Tue., Thurs. (Mon., Wed., Fri., Sat. ↑↑)	9476 Through Goods Mon., Thurs. ↑↑	9478 Through Goods Mon. to Fri.
SALE ES	arr. dep.	15 20
Rosedale ES	arr. dep.	16 02
Traralgon Livestock Siding NC	arr. dep.	From Orbost	..	16 05	From Orbost	..
TRARALGON ES	arr.	16 50
BAIRNSDALE ES	dep.	16 00	19 25	..
Bairnsdale Oil Siding NC
S.E.C. Siding NC
Hillside NC
Lindenow O	arr.
Fernbank O ES	dep. arr.	16 22	19 47	..
STRATFORD ES	dep. arr.	16 40	20 05	..
Stratford Junction NC ES	dep. arr.	17 04	20 32	..
MAFFRA ES	dep. arr.	17 08	20 36	..
Tinamba O ES	arr. dep.	17 21	13 00	20 53
Heyfield ES	arr. dep.	17 31	13 13	21 03
Cowwarr O ES	arr. dep.	17 44	13 30	21 19
Glengarry NC	arr. dep.	17 58	14 00	21 35
TRARALGON ES	arr. dep.	18 16	14 18	21 54
Morwell Shire Ind. Siding NC	arr. dep.	18 35	14 47	22 10
Maryvale NC ES	arr. dep.	18 35	15 10	22 10
Hazelwood Siding NC	arr. dep.	18 35
Morwell ES	arr. dep.	18 35
Down
Morwell Briquette Siding	arr. dep.
Up
Morwell Briquette Siding	dep.
Morwell ES	arr. dep.	20 25-8431	14 10-9425	19 45-9441	..	23 25-8437	9453	..
Herne's Oak NC	arr. dep.	20 45-8433, 9447	14 45	20 15	..	23 36	22 40	..
" "	arr. dep.	20 25
" "	arr. dep.	20 55	14 55	20 31	..	23 46	23 00	..
YALLOURN ↑	dep.
Moe ↑	arr.
"	arr.	9470	15 05-719, 8419, 8468, 9423, 9427, 9429	20 41-9474	..	23 56	23 10	..
Traralgar	dep. arr.	21 06	16 50	21 20	..	00 20	23 30	..
Yarragon	dep. arr.	21 17	17 02-8474	21 31	..	00 31	23 41	..
Darnum O	dep. arr.	21 25	17 50	21 39	..	00 37	23 47	..
Caltex Siding NC	dep. arr.	..	18 03
WARRAGUL	dep. arr.	..	18 20
Drouin	arr. dep.
Longwarry ES	arr. dep.
Bunyip ES	arr. dep.	21 57	18 35	22 13	..	01 14	00 22	..
Garfield	arr. dep.	22 02	18 55	22 18	..	01 19	00 27	..
Tynong	19 07
Nar-Nar-Goon	arr. dep.	22 15	19 25-8425	22 05	..	01 06	00 14	..
Pakenham "	arr. dep.	..	19 36-8431, 8433
Officer	arr. dep.	22 22	22 00	22 38	..	01 39	00 46	..
Berwick	arr. dep.	22 28	22 10	22 45	..	01 46	00 54	..
Narre Warren	arr. dep.	22 34	22 23	22 52	..	01 52	01 00	..
General Motors NC	arr. dep.	22 39	22 30	22 56	..	01 56	01 04	..
Dandenong	arr. dep.	22 55-9470	22 46-9470, 9474	23 10-9474	01 15-9405	..
Springvale	arr. dep.	23 20	23 38	23 45	..	02 08	01 50	..
Westall	arr. dep.
Oakleigh	arr. dep.
Caulfield	arr. dep.	23 47	00 09	00 13	..	02 33	02 17	..
MELBOURNE	arr. dep.	02 40	..
Flinders Street	dep.	00 12	00 29	00 34	..	02 54	03 05	..
Viaduct Junction (No. 2)	arr.	00 17	00 34	00 39	..	02 58	03 10	..
MELBOURNE YARD	arr.	00 35	00 45	00 50	..	03 15	03 25	..
Maribyrnong River Terminal	arr.
		9474	9458	9470		9414	9476	9478

**SALE-TRARALGON AND BAIRNSDALE-MAFFRA-TRARALGON-MORWELL BRIQUETTE SIDING-
YALLOURN-WARRAGUL-MELBOURNE
GOODS SERVICE-continued.**

Up

STATIONS		9428 Through Goods Mon.		9472 Light Loco. Mon. to Fri. (Sat. ††)	9430 Through Goods Mon. to Thur.	9430 Through Goods Fri.	9432 Light Loco. Mon. to Fri. (Sat. ††)	9444 Light Loco. Mon. to Fri. (Sat. ††)
SALE ES	arr.
Rosedale ES	dep.
Traralgon Livestock Siding NC	arr.
TRARALGON ES	arr.
BAIRNSDALE ES	dep.	22 00	23 05
Bairnsdale Oil Siding NC
S.E.C. Siding NC
Hillside NC
Lindenow O	arr.
Fernbank O ES	dep.	22 22	23 22
..	arr.
STRATFORD ES	dep.	22 42	23 44
..	arr.	23 09	00 09 Sat.
Stratford Junction NC ES	dep.	23 13	00 14
MAFFRA ES	arr.	23 35	00 35-9447
..	23 50 -9447
Tinamba O ES	dep.	23 50 Tue. to	00 55
..	arr.	Fri.
Heyfield ES	dep.	00 03	01 08
..	arr.
Cowwarr O ES	dep.	00 21	01 22
..	arr.
Glengarry NC	dep.	00 42	01 40
..	arr.
TRARALGON ES	dep.	01 05	02 04
..	arr.	01 20-9459	02 22
..	Mon. to
..	Fri.
Morwell Shire Ind. Siding NC	dep. 00 30	..	01 10	02 40	Form	04 10-9405	06 30	..
Maryvale NC ES	arr. 00 40	02 40
..	dep. 01 40	(No. 9430)	04 17 -9407
Hazelwood Siding NC	arr.	Mon.
..	dep.
Morwell ES	arr.	01 25	04 25	06 45	..
Down
Morwell	dep.	01 30	04 35	06 55	..
Morwell Briquette Siding	arr.	01 40	04 45	07 05	..
Up	Through	Through	Through	Through	Through	Through
Morwell Briquette Siding	dep.	Goods	Goods	Goods	Goods	Goods	Goods
..	02 10	05 40	09 10	..
Morwell ES	arr.	02 20 B	02 55	..	05 50 B	09 22	..
Herne's Oak NC	dep. 01 50	..	02 28	03 02	..	05 57	09 29-9415	..
..	arr. 01 57	09 42	..
..	dep.
YALLOURN †	dep.
Moe †	arr.	02 38	06 07	09 54	..
..	06 35 -8442	10 05	..
Trafalgar	dep. 02 07	..	02 48	03 12-9407
..	arr.	02 58	03 23	..	06 47	10 16	..
Yarragon	dep. 02 18	..	03 05	03 31	..	06 55	10 26	..
..	arr.
Darnum O	dep. 02 28
..	arr.
Caltex Siding NC	dep.
WARRAGUL	arr.
Drouin	dep. 02 45	..	03 23	03 45	..	07 09	10 40-8411,	..
..	arr.	8456	..
Longwarry ES	dep. 02 54	..	03 32	03 56	..	07 18	11 05	..
..	arr.	03 40	04 04	..	07 26	11 14	..
Bunyip ES	dep. 03 02	..	03 44	04 08	..	07 30	11 22	..
..	arr.	11 27	..
Garfield	dep. 03 06
Tynong
Nar-Nar-Goon	arr.	03 56	04 21	..	07 43
..	dep. 03 19	..	04 04	04 28	..	07 52
Pakenham "	arr.	04 09	04 35
Officer	dep. 03 25	..	04 16	04 45
..	arr.	04 20	05 25	..	08 05	12 10	..
Berwick	dep. 03 31	..	04 28	05 30	..	08 09	12 15	..
..	arr.	04 28	05 42	..	08 23	12 28	..
Narre Warren	dep. 03 37	05 50	12 58	..
..	arr.	06 02
General Motors NC	dep. 03 41	06 10
Dandenong	arr.
..	dep. 03 51
Springvale	arr.
..	dep.
Westall	arr.
..	dep.
Oakleigh	arr.	04 42	08 44	13 09	..
..	dep. 04 05	..	04 50	08 52	13 17	..
Caulfield	arr.	09 27	13 40	..
..	dep. 04 13	..	05 10	09 50	14 00	..
MELBOURNE	arr.	05 15	09 55	14 05	..
Flinders Street	dep. 04 35	..	06 00	10 10	14 20	..
Viaduct Junction (No. 2)	arr.
MELBOURNE YARD
Maribyrnong River Terminal	arr.
..	dep.
Port Melbourne	arr. 04 50
		9428		9472	9430	9430	9432	9444

B - Maximum speed 96 km/h.

**SALE-TRARALGON AND BAIRNSDALE-MAFFRA-TRARALGON-MORWELL BRIQUETTE SIDING-
YALLOURN-WARRAGUL-MELBOURNE
GOODS SERVICE-continued.**

Up

STATIONS		9446 Loco. & Brakevan Sat. ††	9448 Light Loco. Mon. to Fri. ††	9450 Roadside Goods Sat. ††	9452 Through Goods Mon. to Sat. ††	9454 Goods Mon. to Fri. ††	9456 Goods Mon. to Fri. ††	9462 Through Goods Mon. to Fri.
SALE ES	arr.	From 07 43
"	dep.	07 55	..	09 00
Rosedale ES	arr.	09 35
"	dep.	08 15	..	09 50
Traralgon Livestock Siding NC
TRARALGON ES	arr.	08 35	..	10 25
BAIRNSDALE ES	dep.	06 40
Bairnsdale Oil Siding NC
S.E.C. Siding NC
Hillside NC
Lindenow O	arr.
"	dep.	06 56
Fernbank O ES	arr.
"	dep.	07 06
STRATFORD ES	arr.	07 25
"	dep.	07 28
Stratford Junction NC ES	..	Via
MAFFRA ES	arr.	Sale
"	dep.
Tinamba O ES	arr.
"	dep.
Heyfield ES	arr.
"	dep.
Cowwarr O ES	arr.
"	dep.
Glengarry NC	arr.
"	dep.
TRARALGON ES	arr.
"	dep.	..	09 40	16 35
Morwell Shire Ind. Siding NC	16 45-8474,
Maryvale NC ES	arr.	17 48-9423,
"	dep.	9429
Hazelwood Siding NC	arr.
"	dep.
Morwell ES	arr.	..	09 55
Down
Morwell	dep.	..	10 00
Morwell Briquette Siding	arr.	..	10 10
Up	Goods ††
Morwell Briquette Siding	dep.	..	10 45	..	11 30
Morwell ES	arr.	17 58-8421,
"	dep.	..	11 00	..	11 40	8478,9441
Herne's Oak NC	arr.	..	11 10	19 15-8423
"	dep.	..	-8411
"	arr.	..	11 25	..	11 47	19 25
YALLOURN †	dep.	14 30
Moe †	arr.	..	11 40	..	11 57	14 50	..	19 35
"	dep.	..	13 00	..	12 20	15 15	..	20 15
Trafalgar	arr.	..	To	..	12 31	To	..	20 26
"	dep.	..	Yallourn	..	12 39	Morwell	..	20 36
Yarragon	arr.	..	(Page 25)	Briquette
"	dep.	Siding
Darnum O	arr.	(Page 25)
"	dep.
Caltex Siding NC
WARRAGUL	arr.
"	dep.	12 53	20 51
Drouin	arr.
"	dep.	13 05	21 02
Longwarry ES	arr.
"	dep.	13 13	21 10
Bunyip ES	arr.	-9423
"	dep.	13 18	21 15
Garfield
Tynong
Nar-Nar-Goon	arr.
"	dep.	13 31	21 28
Pakenham "	arr.
"	dep.	13 38	21 35-9458
Officer	arr.
"	dep.	13 44	21 44
Berwick	arr.
"	dep.	13 50	..	17 00	21 47
Narre Warren	arr.
"	dep.	13 54	..	17 07	21 51
General Motors NC
Dandenong	arr.	14 06	..	17 20	22 08-9459
"	dep.	14 50	22 20
Springvale	arr.	To	..
"	dep.	C'bourne	..
Westall	arr.
"	dep.
Oakleigh	arr.	15 15
"	dep.
Caulfield	arr.	15 24	22 49
"	dep.
MELBOURNE	arr.
Flinders Street	dep.	15 44	23 09
Viaduct Junction (No. 2)	15 48	23 14
MELBOURNE YARD	arr.	16 00	23 30
Maribyrnong River Terminal	arr.
		9446	9448	9450	9452	9454	9456	9462

**MELBOURNE-TRARALGON-BAIRNSDALE-ORBOST (via MAFFRA)
GOODS SERVICE**

Down

STATIONS		9429 Through Goods Tue., Fri. ††	9447 Goods Mon. to Thur.	9447 Goods Fri.	9453 Through Goods Mon. to Thur.	9453 Through Goods Fri.	9461 Light Loco. Mon., Thur. ††	
MELBOURNE YARD	dep.	14 00	15 10	15 10	18 40	18 40
Westall	arr.	..	16 00	16 00
"	dep.	..	Through Goods 16 45	Through Goods 16 45
Traralgon ES	arr.	-9474 17 46	21 10	21 10	Tue. to Fri. 00 15 Mon. to Fri.	Sat. 00 15 Sat. ††
"	dep.	18 40	22 20	23 25	01 45	02 30
Bairnsdale ES †	arr.	21 50	Tue. to Fri. 01 40	Sat. 02 15	04 25	05 20
"	dep.	-9430 22 50	02 05	Mon. 02 05	Tue. to Fri. 08 40	Mon. 08 40	13 00	..
Nicholson NC	arr.	09 20	09 20
Bumberrah	dep.	23 29	02 40	02 40	09 35	09 35	13 25	..
Bruthen †	arr.	..	03 00	03 00	09 55	09 55
"	dep.	23 52	03 20	03 20	10 30	10 30	-9474 13 40	..
Waygara Sawmill Siding NC	arr.	..	04 20	04 20	11 30	11 30
Nowa Nowa †	dep.	Wed., Sat. †† 00 56	04 45	04 45	-9474 12 10	-9474 12 10	14 15	..
Waygara NC	arr.	..	05 40	05 40	13 00	13 00
ORBOST †	dep.	..	06 00	06 00	13 10	13 10	14 44	..
	arr.	02 20	06 30	06 30	13 40	13 40	15 05	..

**ORBOST-BAIRNSDALE TRARALGON-MELBOURNE (via MAFFRA)
GOODS SERVICE**

Up

STATIONS		9474 Roadside Goods Mon. to Fri.	9476 Roadside Goods Mon., Thur. ††		9430 Roadside Goods Mon. to Thur.		9430 Roadside Goods Fri.	
ORBOST †	dep.	09 25	15 30	..	17 00	..	18 10	..
Waygara NC	arr.	10 00	17 35	..	18 45	..
"	dep.	10 30	16 05	..	17 55	..	19 05	..
Nowa Nowa †	arr.	11 15	16 50	..	18 40	..	19 50	..
"	dep.	-9453 12 00	17 15	..	19 05	..	20 25	..
Waygara Sawmill Siding NC	arr.	13 10	Through Goods	..	20 10
Bruthen †	dep.	-9461 13 50	18 13	..	20 30	..	-9429 21 35	..
Bumberrah NC	arr.	14 18	20 58	..	22 03	..
Nicholson NC	dep.	14 30	18 40	..	21 30	..	22 40	..
Bairnsdale ES †	arr.	15 15	19 15	..	-9429 Through Goods 22 00	..	-9429, 8433	..
"	dep.	16 00	19 25	..	Tue. to Fri. 01 20	..	23 05 Sat.	..
Traralgon ES	arr.	18 35	22 10	..	02 22	..	Mon.	..
"	dep.	-9429 20 10	-9447 23 10	..	02 40	..	02 40	..
Westall	arr.	06 10	..	06 10	..
"	dep.
MELBOURNE YARD	arr.	Tue. to Sat. 00 35	Tue., Fri. †† 03 15

For intermediate times between Bairnsdale, Maffra/Sale and Melbourne Yard see pages 22 to 28.

When vehicles on the Bairnsdale-Orbost Line are attached by means of Screw Couplings a space of five (5) cm must be allowed between the Buffers; the Couplings must be eased to this extent at Bairnsdale and Orbost.

**MELBOURNE-KORUMBURRA-BARRY BEACH-YARRAM
FULL GOODS TRAIN SERVICE**

UP		9460 Through Goods (Tue to Sat. ††)	9483 Through Goods Mon.		9484 Through Goods Mon.		9487 Goods Mon. to Fri.	
B.P. Siding	dep.	ex GLG	03 00
Newport	..	02 55	03 10
South Kensington	..	03 17	03 23
Nth. Melbourne Jctn.	arr.	03 27
"	dep.	03 20	03 37
MELBOURNE YARD	arr.
DOWN		9461			9485			
East Yard	dep.
Viaduct Junction (No. 2)	dep.	03 25	03 35	..	03 41
Flinders Street	arr.	..	03 45
"	dep.	03 30	03 50	..	03 45
Caulfield	arr.
"	dep.	03 56	04 15	..	04 05
Oakleigh	arr.	..	04 25
"	dep.	04 06	04 55	..	04 13
Westall	arr.
"	dep.
Springvale	..	04 15	05 05	..	04 22
Dandenong ES	arr.	..	05 15	From Berwick	..
"	dep.	04 25	05 45	..	04 32	..	18 24	..
Aust. Window Glass	arr.
Siding	dep.
Lyndhurst	arr.	..	06 00	18 40-9492	..
"	dep.
Cranbourne ES	arr.
"	dep.	04 48	04 49
Clyde
Tooradin	05 06
Koo-wee-rup ES	arr.
"	dep.	05 17	05 20
Lang Lang ES	arr.
"	dep.	05 30	05 37
Aust. Glass Company	arr.
Siding	dep.
Nyora ES	arr.	05 47	06 05
"	dep.	06 00	07 00
Loch	..	06 09	07 09
Bena
KORUMBURRA ES	arr.	06 50
"		-9490 R'side Goods						
"	dep.	09 45	07 45
Leongatha ES	arr.	10 12
"	dep.	10 17	08 10
Koonwarra	arr.	10 38
"	dep.	10 48
Meeniyan ES	arr.	10 57
"	dep.	11 17	08 34
Buffalo	arr.	11 35
"	dep.	11 50
Fish Creek	arr.	12 02
"	dep.	09 05
Foster ES †	arr.
"	dep.	09 37
Toora †	arr.	09 53
"	dep.	10 00
Barry Beach Junction	arr.	10 10
"	dep.	10 20
Barry Beach	arr.	10 30
UP								
Barry Beach	dep.
Barry Beach Junction	arr.
DOWN								
Barry Beach Junction	dep.
Welshpool †	arr.
"	dep.
Alberton	arr.
"	dep.
YARRAM †	arr.
		9461	9483		9485		9487	

**MELBOURNE-KORUMBURRA-BARRY BEACH-YARRAM
FULL GOODS TRAIN SERVICE**

UP		9489 Through Goods (Mon. to Fri. ††)		9491 Through Goods Mon. to Fri.		9493 Roadside Goods Sun. to Fri.		
B.P. Siding	dep.	19 05
Newport	..	ex Port
South Kensington	..	Melbourne
Nth. Melbourne Jctn.	arr.
MELBOURNE YARD	dep.
	arr.
DOWN								
East Yard	dep.	21 45	..	23 50
	dep.	Mon. to
Viaduct Junction (No. 2)	21 56	..	Sat.
Flinders Street	arr.	19 15	..	22 01F	..	00 10
	dep.	19 22	..	22 20	..	00 15
Caulfield	arr.	19 42
	dep.	20 10	..	22 40	..	00 35
Oakleigh	arr.
	dep.	20 17	..	22 47	..	00 44
Westall	arr.
	dep.
Springvale	..	20 26	..	23 05	..	00 57
Dandenong ES	arr.	23 15-9480	..	01 15-9482
	dep.	20 36	..	23 50	..	02 00
Aust. Window Glass	arr.	02 11
Siding	dep.	02 40
Lyndhurst	arr.	Tue. to
	dep.	Sat
Cranbourne ES	arr.	00 10
	dep.	21 00	..	00 30	..	03 03
Clyde
Tooradin	..	21 15	03 18
Koo-wee-rup ES	arr.	-9480	..	01 00-9482	..	03 36
	dep.	21 30	..	01 05	..	03 40
Lang Lang ES	arr.	01 20	..	03 56
	dep.	21 43	..	01 25	..	03 59
Aust. Glass Company	arr.	04 15
Siding	dep.	05 00
Nyora ES	arr.	01 52
	dep.	22 06	..	02 00	..	05 09
Loch	..	22 15	..	02 15	..	05 24
Bena
KORUMBURRA ES	arr.	22 20	..	02 45	..	05 55
		-9482	..	-9490,
			..	9461
			..	Tue., Fri.
			..	(Mon., Wed.,
			..	Thur. ††)
			..	07 00
Leongatha ES	dep.	23 00	..	07 20
	arr.	07 35
Koonwarra	dep.	23 20	..	08 00
	arr.	08 20
Meeniyah ES	dep.	23 33
	arr.
Buffalo	dep.	23 47	..	08 32
	arr.	Tue. to	..	08 48
		Sat. ††
		00 02	..	09 08
Fish Creek	dep.
	arr.
Foster ES †	dep.	00 20	..	09 25
	arr.	00 45	..	09 50
Toora †	dep.	00 55	..	10 05
	arr.	01 10	..	10 20
Barry Beach Junction	dep.	01 20	..	10 30
	arr.	01 30	..	10 38
Barry Beach	dep.	01 40	..	10 46
	arr.	02 00	..	11 02
UP								
Barry Beach	dep.	11 30
Barry Beach Junction	arr.	11 38
DOWN								
Barry Beach Junction	dep.	11 48
Welshpool †	arr.
	dep.	11 58
Alberton	arr.
	dep.
YARRAM †	arr.	12 45
		9489		9491		9493		

F - 21 45 (No. 9491) Through Goods is to be routed via No. 1 Platform at Flinders Street to load parcels.

**YARRAM-BARRY BEACH-KORUMBURRA-MELBOURNE
FULL GOODS TRAIN SERVICE**

UP		9480 Roadside Goods Mon. to Fri.		9482 Goods Tue., Fri. (Mon., Wed., Thur. ††)	9486 Lt. Loco. Tue. to Fri. (Sat. ††)		9490 Through Goods Tue. to Sat. ††	9495 Goods Friday
YARRAM † Alberton	dep.	13 45
	arr.
	dep.
	arr.
Welshpool †	dep.	14 10
	arr.	14 20
Barry Beach Jtn.	dep.
	arr.
DOWN								
Barry Beach Jtn. Barry Beach	dep.
	arr.
UP:								
Barry Beach	dep.	03 35	..
	arr.	03 55	..
Barry Beach Jtn.	dep.	04 05	..
	arr.	04 15	..
Toora †	dep.	14 33	04 25	..
	arr.	14 43	04 40	..
Foster ES †	dep.	15 00	04 45	..
	arr.	15 10	05 15	..
Fish Creek	dep.	05 30	..
	arr.	05 47	..
Buffalo	dep.	15 39	06 15	..
	arr.	15 55	06 55	..
Meeniyan ES	dep.	16 05	07 40	..
	arr.	16 20	08 20	..
Koonwarra	dep.	16 30	08 38	..
	arr.	16 40	08 54	..
Leongatha ES	dep.	17 00	09 12	..
	arr.	17 12	09 40	..
KORUMBURRA ES	dep.	17 30	10 00	..
	arr.	18 05	10 10	..
Bena	dep.	18 30	..	Mon. to Fri. 23 05	10 20	..
	arr.	10 32	..
Loch	dep.	10 40	..
	arr.	10 50	..
Nyora ES	dep.	19 05	..	23 40	11 00	..
	arr.	19 10	..	23 55	11 20	..
Aust. Glass Company Siding	dep.	Tue. to Sat. 00 05	11 40	..
	arr.	19 20	..	00 20	11 50	..
Lang Lang ES	dep.	20 30	12 00	..
	arr.	20 45	12 10	..
Koo-wee-rup ES	dep.	21 05	..	00 35	12 20	..
	arr.	21 20	..	00 50	12 30	..
Tooradin	dep.	21 40	..	01 03-9491	12 40	..
	arr.	21 51	12 50	..
Clyde	dep.	13 00	..
	arr.	13 10	..
Cranbourne ES	dep.	22 12	13 20	..
	arr.	22 29	..	01 32	13 30	..
Lyndhurst	dep.	22 48	06 25	..	13 40	..
	arr.	23 26	13 50	..
Aust. Window Glass Siding	dep.	14 00	..
	arr.	14 10	..
Dandenong ES	dep.	23 40-9491	..	01 50-9493	14 20	..
	arr.	Tue. to Sat. 00 20	14 30	..
Springvale	dep.	00 20	..	02 23	06 38	..	14 40	..
	arr.	14 50	..
Westall	dep.	15 00	..
	arr.	15 10	..
Oakleigh	dep.	15 20	..
	arr.	00 35	..	02 38	15 30	..
Caulfield	dep.	00 50	..	02 52	06 55	..	15 40	..
	arr.	15 50	..
Flinders St. 'E' Box	dep.	00 59	..	03 03	07 05	..	16 00	..
	arr.	16 10	..
Flinders Street	dep.	03 26u	07 25	..	16 20	..
	arr.	01 25	..	03 47	07 28	..	16 30	..
Viaduct Junction (No. 2)	dep.	16 40	..
	arr.	01 30	..	03 52	07 32	..	16 50	..
MELBOURNE YARD DOWN	dep.	To Spotswood	..	04 10	07 40	..	17 00	..
	arr.	17 10	..
South Kensington	dep.	17 20	..
	arr.	17 30	..
Newport	dep.	17 40	..
	arr.	17 50	..
B.P. Siding	dep.	18 00	..
	arr.	18 10	..
		9480		9482	9486		9490	9495

u - 23 05 (No. 9482) Goods ex Korumburra is to be routed via No. 1 Platform Flinders Street to discharge parcels.

**YARRAM-BARRY BEACH-KORUMBURRA-MELBOURNE
FULL GOODS TRAIN SERVICE**

UP		9488 Loco. & Van Mon.	9492 Through Goods Wed. ††	9494 Goods Sat. ††	9496 Goods Tue. to Sat. ††	9498 Roadside Goods Mon. to Fri.	9497 Light Loco. Sunday	
YARRAM †	dep.
Alberton	arr.
"	dep.
Welshpool †	arr.
"	dep.
Barry Beach Jtn.	arr.
DOWN								
Barry Beach Jtn.	dep.
Barry Beach	arr.
UP:								
Barry Beach	dep.	11 00
Barry Beach Jtn.	arr.	11 10
"	dep.	11 20
Toora †	arr.	11 30
"	dep.	11 40
Foster ES †	arr.
"	dep.	11 52
Fish Creek	arr.
"	dep.	12 24	13 00
Buffalo	arr.	13 12
"	dep.	13 22
Meeniyah ES	arr.
"	dep.	12 56	13 55
Koonwarra	arr.
"	dep.
Leongatha ES	arr.	14 26
"	dep.	13 23	14 46
KORUMBURRA ES	arr.	14 00	15 17
"	dep.	..	17 00	14 00
Bena	17 23
Loch
Nyora ES	arr.	14 44
"	dep.	..	17 34	14 48
Aust. Glass Company	arr.	14 58
Siding	dep.	16 10
Lang Lang ES	arr.	..	17 59	16 26
"	dep.	16 50
Koo-wee-rup ES	arr.	..	18 00	17 02
"	dep.	17 07
Tooradin	17 17
Clyde
Cranbourne ES	arr.	..	18 26	17 41
"	dep.	..	18 45-9487	17 46	..	19 40
Lyndhurst	arr.	18 00	..	19 50
"	dep.	18 30	..	20 15
Aust. Window Glass	arr.
Siding	dep.
Dandenong ES	arr.	..	19 00	18 44	..	20 30
"	dep.	..	19 07	18 52	..	20 45
Springvale	arr.
"	dep.	..	19 16	19 02
Westall	arr.	20 55
"	dep.	21 10
Oakleigh	arr.	21 20
"	dep.	..	19 27	19 20	..	21 35
Caulfield	arr.
"	dep.	..	19 37	19 30	..	21 45
Flinders St. 'E' Box	arr.
Flinders Street
"	dep.	..	19 57	19 58	..	22 05
Viaduct Junction (No. 2)	20 01	20 03	..	22 09
MELBOURNE YARD	arr.	..	To	To	..	To
DOWN			Brooklyn	Spotswood		North Geelong		
South Kensington	dep.	23 00
Newport	23 15
"	23 25
B.P. Siding	arr.	23 35
		9488	9492	9494	9496	9498	9497	

LINES CLOSED

WARRAGUL-NAYOOK

Line closed on and after 1/10/1958. Last train ran 30/9/1958. (Sec. 54/6221).

NAYOOK-NOOJEE

Line closed on and after 27/3/1954.

MOE-THORPDALE

Line closed on and after 4/12/58. Last train ran 3/12/1958. (Sec. 53/11764).

HERNE'S OAK-YALLOURN

Line closed on and after 31/3/1957. Last train ran 30/3/1957. (Sec. 54/6899).

KORUMBURRA-JUMBUNNA

Line closed on and after 30/9/1953. Last train ran 28/9/1953. (Sec. 53/5710).

KOO-WEE-RUP-BAYLES

Line closed on and after 5/2/1959. Last train ran 4/2/1959.

BAYLES-YANNATHAN

Line closed on and after 15/4/1950. Last train ran 12/4/1950. (Sec. 57/14024)

MOE-ERICA

Line closed on and after 25/6/1954. Last train ran 24/6/1954. (Sec. 54/1972).

ERICA-PLATINA

Line closed on and after 1/10/1952. (Sec. 52/8935).

PLATINA-WALHALLA

Line closed on and after 1/4/1944.

MAFFRA-BRIAGOLONG

Line closed on and after 21/10/1952. (Sec. 52/6398).

ALBERTON-PORT ALBERT

Line closed on and after 14/2/1949. Last train ran 12/2/1949. (Sec. 47/14138).

YARRAM-WOODSIDE

Line closed on and after 26/5/1953. Last train ran 25/5/1953. (Sec. 53/4678).

MORWELL-MIRBOO NORTH

Last Diesel Rail Car trip ran Saturday 7/9/1968. (Sec. 67/4909).

Line closed on and after 24/6/74. Last train ran 18/6/74. (Sec. 67/4673).

TRARALGON-MAFFRA

Last Diesel Rail Car trip ran Saturday 9/7/1977. (Sec. 77/549).

NYORA-WONTHAGGI

Last Diesel Rail Car trip ran Sunday 4/12/1977. (Sec. 77/1826).

Line closed on and after Tuesday 21/11/1978. (Sec. 78/3811).

Last train ran Wednesday 8th November 1978.

DANDENONG-YARRAM

Last Passenger Train ran Friday 5/6/81.

DANDENONG-LANG LANG

Last Diesel Electric Rail motor trip ran on Saturday 3/10/81. (Sec. 68/81).

GENERAL INSTRUCTIONS

BLOCK NOTES

EASTERN LINES

Three-position signalling is in force on the Up and Down Through Suburban between Spencer Street No. 2 Box and Flinders Street "A" Box; and on the Up and Down lines from Flinders Street "B", "C", "D" and "E" Boxes to Bunyip and between Yarragon and Moe.

Except as shown hereunder, the **Double Line Block Telegraph System** is in force on the Up and Down lines on the following sections:—Longwarry and Drouin; Drouin and Warragul; Warragul and Darnum; Darnum and Yarragon.

The **Automatic and Track Control System of Train Signalling** (General Appendix pages 163-174) is in force between Moe and Morwell. Herne's Oak is an Unattended Crossing Station at which the points and signals are remotely controlled from Morwell.

Lever Locking Track Control System (modified) is in force between:

Flinders Street 'A' Box and Spencer Street No. 2 Box (City Circle Viaduct)

Flinders Street 'A' Box and Spencer Street No. 2 Box (Burnley Loop Viaduct)

Flinders Street 'A' Box and Spencer Street No. 2 Box (Northern Loop Viaduct)

Flinders Street 'A' Box and Spencer Street No. 2 Box (Caulfield Loop Viaduct.)

Malvern is switched in as required for the operation of Local Goods Trains.

Oakleigh is switched in from 04 30 Mondays until 20 00 the following Saturday and at other times as arranged by the Train Controller.

General Motors is switched in from 06 30 to 21 00 Mondays to Fridays and at other times as arranged by the Train Controller.

Narre Warren is switched in as arranged by the Train Controller.

Berwick is switched in from 04 40 until 20 25 Mondays to Fridays. From 05 40 until 11 55 Saturdays. Sundays as arranged by the Train Controller.

Nar-Nar-Goon is switched in from 06 05 until No. 8474 clears and at other times as arranged by the Train Controller.

Drouin is switched in as a Block Post Mondays to Fridays from 05 50 until No. 8474/75 clears; Saturdays from 05 50 until No. 8456/57 clears, and at other times as arranged by the Train Controller.

Darnum is switched in as a Block Post Mondays to Fridays as arranged by the Train Controller.

Trafalgar is switched in Mondays to Saturdays as arranged by the Train Controller for the operation of Roadside Goods Trains.

Maryvale is provided with an Intermediate Electric Staff Instrument and worked in accordance with instructions shown in the General Appendix, pages 210-212.

Tinamba may be switched in as Electric Staff Station as arranged by the Train Controller Spencer Street who before doing so must arrange for the Engineman and Guard of each up and down train to be advised. The Signaller at the Staff station where the crews are instructed must make an entry to that effect across the figure line of the Train Register Book.

Bumberrah and **Waygara** are opened as Special Block posts as required in accordance with instructions contained in the General Appendix.

Lindenow may be opened as an Intermediate Block Post in accordance with instructions contained in the General Appendix.

NOTE:—Regular use of the Staff Automatic Exchange Apparatus at Bunyip and Longwarry ceased during December 1979.

SOUTH EASTERN LINES

Lang Lang is switched in as an Electric Staff Station as arranged by the Train Controller.

When required **Lyndhurst**, **Fish Creek** and **Buffalo** may be opened as Intermediate Block Posts in accordance with Instructions contained in the General Appendix, pages 204-207.

When required **Alberton** may be opened as an Intermediate Block post in accordance with instructions contained in the General Appendix, pages 157 and 158.

DISTANCE IN KILOMETRES FROM MELBOURNE (SPENCER STREET) TO:

Melbourne-Bairnsdale-Orbost				Melbourne-Yarram	
Flinders Street	1			Flinders Street	1
Richmond	3.5			Richmond	3.5
South Yarra	5.5			South Yarra	5.5
Hawksburn	6.5			Hawksburn	6.5
Toorak	8			Toorak	8
Armadale	8.5			Armadale	8.5
Malvern	10			Malvern	10
Caulfield	12			Caulfield	12
Carnegie	13.5			Carnegie	13.5
Murrumbeena	14.5			Murrumbeena	14.5
Hughesdale	15.5			Hughesdale	15.5
Oakleigh	16.5			Oakleigh	16.5
Huntingdale	18.5			Huntingdale	18.5
Clayton	20.5			Clayton	20.5
Westall	22.5			Westall	22.5
Springvale	24.5			Springvale	24.5
Sandown Park	25.5			Sandown Park	25.5
Noble Park	27.5			Noble Park	27.5
Yarraman	29			Dandenong	31
Dandenong	31			Amalgamated Co-op. Marketers (Aust.) Ltd. Siding	33
General Motors	35			Commonwealth Eng. Coy's Siding	34
Hallam	37.5			Tubemakers of Aust. Ltd. Siding	34
Narre Warren	40.5			Containers Ltd. Siding (Dandenong)	34.5
Berwick	44.5			Aust. Windowglass Siding	35
Beaconsfield	47			Lyndhurst	38.5
Officer	51.5			Cranbourne	45
Pakenham	58			Clyde	50.5
Nar-Nar-Goon	66			Tooradin	58
Tynong	71			Dalmore	61
Garfield	75			Koo-wee-rup	67
Bunyip	79			Monomeith	70
Longwarry	84			Lang Lang	77
Drouin	92			Australian Glass Co. Siding	86.5
Warragul	100			Nyora	91
Caltex Siding	100			Loch	96
Darnum	107			Bena	106
Yarragon	112			Korumburra Cattle Siding	111.5
Trafalgar	120			Korumburra	112
Moe	130			Ruby	122
Moe-Yallourn				Leongatha	127
Moe	130			Koonwarra	135
Yallourn	138			Meenyan	143
Herne's Oak	137			Buffalo	154
Morwell	144			Fish Creek	161
Morwell-Morwell Briquette Siding.				Foster	174
Morwell	144			Toora	184
Morwell Briquette Siding	149			Barry Beach Junction	190
Hazelwood Siding	146			Welshpool	194
Maryvale	149			Alberton	215
Morwell Shire Industrial Siding	148.5			Yarram	220
Traralgon	158				
Traralgon Live Stock Siding	160.5			Barry Beach Junction-Barry Beach	
Rosedale	180			Barry Beach Junction	190
City of Sale Industrial Estate Private Siding	204			Barry Beach	195
Sale	207				
Sale Livestock Siding	209				
Felt & Textiles of Aust. Ltd. Siding	209				
Sale-Sale Wharf					
Sale	207				
Shell Co. Siding	209				
Sale Wharf	209				
		Via	Via		
		Maffra	Sale		
Stratford Junction	221	222			
Stratford	222	223			
Fernbank	247	248			
Lindenow	257	258			
Hillside	263	264			
S.E.C. Siding	274	275			
Bairnsdale Oil Siding	275	276			
Bairnsdale	275	276			
Nicholson	285	286			
Bumberrah	295	296			
Bruthen	306	307			
Waygara Sawmilling Siding	334	335			
Nowa Nowa	335	336			
Waygara	357	358			
Orbost	372	373			
Traralgon-Maffra					
Traralgon	158				
Glengarry	168				
Cowwarr	184				
Heyfield	195				
Tinamba	205				
Maffra	212				

FLASHING LIGHTS SIGNALS AND BOOM BARRIERS

(Instructions pages 76-77 General Appendix)

EASTERN LINES

Name and Distance of Nearest Station	Level Crossing	Distance Km	Type
MELBOURNE TO DANDENONG			
Caulfield 11.786	Grange Road	12.574	BB
Carnegie 13.533	Koorngang Road	13.447	BB
Murrumbidgee 14.422	Murrumbidgee Road T	14.338	BB
Hughesdale 15.475	Poath Road	15.377	BB
Clayton 20.512	Clayton Road T	20.425	BB
	Centre Road	21.278	FL
Westall 22.638	Westall Road	22.815	FL
Springvale 24.496	Springvale Road	24.419	BB
Sandown Park 25.683	Corrigan Road T	26.406	FL
Noble Park 27.376	Heatherton Road	26.995	FL
	Chandler's Road T	28.422	FL
DANDENONG TO ORBOST via SALE			
Dandenong 31.194	Webster Street T	31.729	FL
	South Gippsland Highway T	33.168	FL
Hallam 37.452	Hallam Road T	37.546	FL
Narre Warren 40.577	Webb Street	40.609	BB
	Cranbourne Road T	40.981	FL
Berwick 44.576	Clyde Road T	44.322	FL
Beaconsfield 46.989	Kenilworth Road T	47.345	FL
Officer 51.499	Brunt Road T	49.344	FL
	Station Road	51.218	FL
Pakenham 57.193	Cardinia Road T	53.636	FL
	McGregors Road	57.071	FL
	Main Road	57.023	FL
	Racecourse Road	58.751	FL
Nar Nar Goon 65.805	Koo-wee-rup Road	65.674	FL
Tynong 70.803	School Road T	70.375	FL
Bunyip 79.088	Iona Road	78.635	FL
Drouin 92.224	Gardner's Road T	89.828	FL
	Lardner's Road T	95.625	FL
Warragul 99.766	Gallagher's Lane T	98.547	FL
	Bloomfield Road T	103.070	FL
Yarragon 112.216	Factory Road	111.848	FL
	Shady Creek Road	112.605	FL
Trafalgar 120.266	Ashley Street	119.945	FL
	Not Named	120.838	FL
	Telephone Road T	123.507	FL
Moe 130.225	Lloyd Street	129.445	BB
Morwell 144.372	Tramway Road T	148.244	FL
Traralgon 158.072	Liddiard Road	159.310	FL
	McNairn Road T	160.221	FL
Rosedale 180.365	Willung Road T	180.523	FL
	Longford Road T	184.298	FL
Sale 206.963	Hunt Place T	203.900	FL
	Raglan Street T	208.613	FL
	Maffra Road	209.630	FL
Stratford 223.843	Hobson Street	222.529	FI
	Princes Highway T	222.830	FL
	McAllister Street	223.574	FL
Bairnsdale 275.143	Princes Highway T	271.239	FL
	Ligar Street	274.467	FL
	Buchanan Street	275.392	FL
Nicholson 285.192	Princes Highway	281.656	FL
TRARALGON TO MAFFRA			
Traralgon 158.072	Liddiard Road	159.310	FL
Glengarry 167.600	Rosedale Road T	167.396	FL
Cowwarr 184.158	Maffra Road T	176.354	FL
	Maffra Road T	181.766	FL
	Maffra Road T	184.374	FL
Heyfield 195.021	Maffra Road T	194.738	FL
	Licola Road T	195.302	FL
	Maffra Road	198.367	FL
	Maffra Road T	204.648	FL
Tinambra 204.859	Maffra Road T	212.295	FL
Maffra 212.579	Bundalagwah Road	212.388	FL
	Sale Road T		
YALLOURN BROWN COAL LINE	Eastern Road	141.750	FL

SOUTH EASTERN LINES

Name and Distance of Nearest Station	Level Crossing	Distance Km	Type
DANDENONG-YARRAM			
Dandenong 31.194	Webster Street T	31.729	FL
	Green's Road	34.742	FL
Lyndhurst 38.362	Lyndhurst Road T	38.590	FL
Cranbourne 45.082	Thompsons Road T	42.526	FL
	Camm's Road T	44.697	FL
	South Gippsland Highway	45.277	FL
	Narre Warren Road T	46.227	FL
Clyde 50.738	Berwick Road T	48.106	FL
	Five Ways Road T	50.047	FL
Koo-wee-rup 67.148	Rossiter's Road T	67.346	FL
Lang Lang 77.404	Westernport Road T	77.205	FL
Bena 105.792	Bena Road	107.441	FL
Korumburra 111.896	Warragul Road T	111.406	FL
Leongatha 126.735	Turner Street	126.077	FL
	Roughhead Street	126.511	FL
	South Gippsland Highway	134.623	FL
Koonwarra 134.864	South Gippsland Highway T	144.403	FL
Meenyan 142.809	Falls Creek Road T	161.413	FL
Fish Creek 161.413	Promontory Road T	172.204	FL
Foster 173.821	Station Road T	173.610	FL
	Harrier Street T	183.952	FL
Toora 183.702	Barry Beach Road T	190.025	FL
Welshpool 194.024 (Main Line and Branch)			
Alberton 214.580	South Gippsland Highway T	199.926	FL
	South Gippsland Highway T	214.815	FL
	South Gippsland Highway T	216.650	FL

Abbreviations: Flashing Lights-F.L. Boom Barriers-B.B.
Level Crossings in the above list indicated by the letter 'T' are equipped with telephone communications.

WATERING FACILITIES

STATION	Locomotive and Tank Water (L)	Carriage Water (C)	Emergency water and description (if not provided with "L" or "C" water)
Bairnsdale	L	C	-
Cranbourne	L	-	-
Foster	L	-	-
Heyfield	-	-	Fire Hose
Koo-wee-rup	-	-	Fire Hose
Korumburra	L	C	-
Leongatha	-	C	-
Maffra	-	C	-
MELBOURNE			
Flinders Street	-	C	-
Spencer Street	-	C	-
Dynon	L	C	-
Moe	-	-	Fire Hose
Newport (Workshops)	L	-	-
Nowa Nowa	L	-	-
Nyora	L	-	-
Orbost	L	-	-
Pakenham	-	C	-
Sale	-	C	Fire Hose
Stratford	-	C	-
Traralgon	-	C	Fire Hose
Warragul	-	C	-
Yarragon	-	-	Fire Hose
Yarram	-	C	-

BOGIE LOUVRE VANS AND FREIGHT VEHICLE WORKING BY INTERURBAN AND INTERCITY PASSENGER TRAINS

Bogie louvre vans and freight vehicles are regularly worked by the following Eastern District passenger trains:

08 26 (No. 8406/07) Pass. Spencer Street-Bairnsdale Mondays to Saturdays. "VBPY" (loaded Sale and Bairnsdale) marshalled leading ex Spencer Street.

18 26 (No. 8430/8431) Pass. Spencer Street-Sale, Mondays to Thursdays. "VBPY" (loaded Bairnsdale and beyond parcels) marshalled leading ex Spencer Street.

18 26 (No. 8432/8433) Pass. Spencer Street-Bairnsdale, Fridays. "VBPY" (loaded Bairnsdale and beyond parcels) marshalled leading ex Spencer Street. For detachment at Bairnsdale, return per 1600 (No. 9474 goods to Traralgon Monday, thence per 1700 (No. 8474/75) Traralgon - Spencer Street, Pass. Tuesday.

21 15 (No. 8474/75) Pass. Spencer Street-Traralgon, Mondays to Thursdays. "VBPY" (loaded parcels Bairnsdale and beyond) marshalled leading ex Spencer Street for detachment at Traralgon for transfer to No. 9453 Goods, Traralgon-Bairnsdale. Return per 1600 (No. 9474) Goods, Bairnsdale to Traralgon Tuesday to Friday, thence per 1700 (No. 8474/75) Traralgon-Spencer Street Pass. Monday, Wednesday to Friday.

21 15 (No. 8474/75) Pass. Spencer Street-Traralgon, Friday. "VBPY" (loaded parcels Bairnsdale and beyond) marshalled leading ex Spencer Street. Detached at Traralgon and returned per 0600 (No. 8452/53) Pass. Bairnsdale-Spencer Street Saturdays, marshalled leading ex Traralgon.

06 00 (No. 8452/53) Pass. Bairnsdale to Spencer Street Saturdays. "VBPY" is attached leading ex Traralgon for return of BRUTE trollies.

07 00 (No. 8450/51) Pass. Sale-Spencer Street, Tuesdays to Fridays. "VBPY" (loaded parcels and return of BRUTE trollies) marshalled trailing ex Sale.

13 20 (No. 8468/69) Pass. Bairnsdale - Spencer Street, Mondays to Saturdays. "VBPY" (loaded Parcels and return of BRUTE trollies) marshalled leading ex Bairnsdale.

17 00 (No. 8474/75) Pass. Traralgon - Spencer Street, Mondays to Fridays. "VBPY" (loaded parcels and return of BRUTE trollies) marshalled trailing ex Traralgon.

Other "VBPY" wagons returned to Flinders Street as arranged by Manager Passenger Services.

MAKE UP OF PASSENGER TRAINS

The composition of InterUrban and InterCity passenger trains are as published by the Manager Passenger Services, Carriage Allotment Officer, extension 1673.

(Reserved)

EXPRESS AND PASSENGER TRAIN LOCOMOTIVE SCHEDULES

MELBOURNE-BAIRNSDALE.

Locomotive Running Times											
DOWN	"L" 205 tonnes	"L" 275 tonnes	"L" 275 tonnes				"T" 210 tonnes	"T" 250 tonnes			
Flinders Street to-	Mins	Mins	Mins				Mins	Mins			
Caulfield	14	14	14
Oakleigh	*	*	*
Dandenong	17	17	17
Hallam	5	4*	5
Narre Warren	3	2*	3
Berwick	4	3*	4
Beaconsfield	3	2*	3
Officer	4	3*	4
Pakenham	6	4*	6
Nar-Nar-Goon	6	5*	6
Tynong	5	3*	5
Garfield	4	3*	4
Bunyip	3	3*	3
Longwarry	4	3*	4
Drouin	8	7*	9
Warragul	7	7	8
Darnum	6	4*	6
Yarragon	5	3*	5
Trafalgar	6	5*	6
Moe	8	7	8
Hernes Oak	*	*	*
Morwell	11	12	12
Traralgon	10	10	10
Rosedale	18	20
Sale	20	22
Stratford	17	17
Fernbank	22	22
Lindenow	9	10
Hillside	*	*
Bairnsdale	15	16
Total	139	121	142	101	107

BAIRNSDALE-MELBOURNE

Locomotive Running Times											
UP	"L" 205 tonnes	"L" 275 tonnes	"L" 275 tonnes	"T" 225 tonnes	"T" 250 tonnes						
Bairnsdale to-	Mins.	Mins.	Mins.	Mins.	Mins.						
Hillside	*	*
Lindenow	16	17
Fernbank	10	11
Stratford	19	21
Sale	18	18
Rosedale	20	22
Traralgon	21	22
Morwell	11	12	12
Hernes Oak	*	*	*
Moe	11	12	12
Trafalgar	8	8	8
Yarragon	6	6	5*
Darnum	5	5	4*
Warragul	5	5	5
Drouin	6	6	5*
Longwarry	6	6	5*
Bunyip	4	4	3*
Garfield	3	3	3*
Tynong	4	4	3*
Nar-Nar-Goon	5	5	3*
Pakenham	6	6	4*
Officer	6	6	4*
Beaconsfield	4	4	2*
Berwick	3	3	2*
Narre Warren	3	3 $\frac{1}{2}$	3*
Hallam	4	3 $\frac{1}{2}$	3*
Dandenong	4	5*	5
Oakleigh	*	*	*
Caulfield	17	17	18
Flinders Street	14	14	14
Total	135	138	123	104	111						

* Locomotive Running Schedule based on train being non-stop at these stations.

(Reserved)

GENERAL INSTRUCTIONS.

METHOD OF NUMBERING TRAIN TIME-TABLES, ETC.

Down trains are given odd and Up trains even numbers.

The lines above the departure time figure at side indicate the station appointed for trains to meet or pass each other, also the number of the trains to be so met or passed

For example:—

DOWN		(a) 9429 Goods MON. TO FRI.	UP		(b) 9478 Goods MON. TO FRI.
Morwell	arr.	17 03	Moe	arr.	23 08
"	dep.	-8474,9423 17 32'	"	dep.	-8437 23 30

The above example indicates:—

- (a) That No. 9429 (Down) meets No. 8474 (Up) and follows No. 9423 (Down).
- (b) That No. 9478 (Up) meets No. 8437 (Down).

LOADS OF GOODS TRAINS

Schedule Loads:—The schedule loads laid down for Goods trains, on both Broad and Standard Gauge lines may be exceeded by the following authorised overloads:—

SINGLE LOCOMOTIVES

When hauled by a "B", "C", "L", "S" or "X" Class Locomotive

— 25 tonnes.

When hauled by a "H", "T" or "Y" Class Locomotive

— 15 tonnes.

MULTIPLE LOCOMOTIVES

A train being hauled by locomotives working in multiple is authorised to have an overload equivalent to the total of that permitted to be taken by each of such locomotives.

EXAMPLES:

- (A) Train hauled by "T" + "T" locomotives in multiple

— Permitted overload

— 30 tonnes

- (B) Train hauled by "B" + "T" locomotives in multiple

— Permitted overload

— 40 tonnes

- (C) Train hauled by "X" + "B" locomotives in multiple

— Permitted overload

— 50 tonnes

Double Headed Loads.—The load which may be hauled by two locomotives is the combined load of the locomotives employed.

The general conditions governing locomotives assisting in front of trains and the lines on which double heading is permitted are shown on page 63.

Parcels Coaches and Motor Coaches.—(i) When Parcels Coaches and Motor Coaches are used for hauling Goods or Stock, the number of vehicles hauled must not exceed eight (8) including brakevan.

- (ii) The maximum load for all Parcels Coaches and Motor Coaches must not exceed the following:—

Ruling Grade	Trailing Load	Ruling Grade	Trailing Load
Level	410 tonnes	1 in 50	125 tonnes
1 in 200	285 "	1 in 40	100 "
1 in 100	215 "	1 in 30	70 "

Diesel Fordson Tractors.—Maximum load hauling or propelling on level is 230 tonnes. The maximum load on grades at a speed of 10 km/h are as follows:—Grade 1 in 50, 30 tonnes; 1 in 75, 65 tonnes; 1 in 100, 85 tonnes; 1 in 110, 90 tonnes; 1 in 200, 150 tonnes, See page 62 for maximum permissible speed.

LOCOMOTIVE RUNNING SCHEDULES

(a) **Goods Trains**—The schedules for Goods trains represent the time necessary to run each section with the specified load under average conditions.

The Locomotive Running schedules for Through Goods trains are based on the loads which a locomotive can haul over the Ruling Grade between recognised Terminal Stations and provide for these trains stopping at certain stations, viz.:-

Should the train stop at any other station en route, an allowance of two (2) minutes over and above the through schedule is to be allowed at each such station where train stops.

Page	Sectional and Terminal Stations	Page	Sectional and Terminal Stations
45, 47, 49	Melbourne to Yallourn	46, 47, 49	Yallourn to Melbourne
45, 47	Melbourne to Traralgon	50	Melbourne to Korumburra
47	Traralgon to Warragul	50	Korumburra to Melbourne
46	Warragul to Melbourne	51	Korumburra to Yarram
48	Traralgon to Orbost (via Sale)	51	Yarram to Korumburra
48	Orbost to Traralgon (via Sale)	51	Toora to Barry Beach
49	Traralgon to Stratford (via Maffra)	51	Barry Beach to Toora
49	Stratford to Traralgon (via Maffra)		
49	Morwell to Morwell Briquette Siding		
49	Morwell Briquette Siding to Morwell		

Light Locomotives.—(i) The Running schedule for a “light” locomotive, two “light” locomotives attached, or in either case with only a brakevan attached, shall (subject to the instructions on pages 54 to 63) be equal to the schedule for the fastest stopping passenger train, for the section over which the locomotive runs, unless a special schedule is issued to the contrary.

(ii) In every case where a brakevan is attached to the locomotive or locomotives, the train must be signalled as a "through" goods train; but before sending the "Is Line Clear" Signal, each Signaller must inform the Signaller in advance, by telephone that the train consists of a locomotive (or locomotives) and brakevan.

It will be the duty of the Engineman to maintain the speed of his train as near to the maximum permissible speed as the load and grade will allow.

GENERAL INSTRUCTIONS – continued.

GENERAL REFERENCES TO FOOTNOTES OF LOAD SCHEDULES

(Pages 45 to 54)

(d) Reference to General Appendix.

(f) Special vehicle limitations.

(x) Load for trains not requiring to stop certain stations.

GOODS TRAINS

MASS LOADS, VEHICLE LIMITS AND LOCOMOTIVE RUNNING TIMES

SPENCER STREET TO WARRAGUL

Locomotive Running Time					SECTION							TONNES			
R'side Sect. Loads	Through Ruling Grade Loads				SECTION							TONNES			
Full Load L-Elec-tric	Full Load L-Elec-tric	500 tns L-Elec-tric	No. 9405 Exp. 305 tns L-Elec-tric	355 tns L-Elec-tric	Kilo-metres	DOWN					B	L	T	Y	
			95 Km/h V'duct	95 Km/h Junc.		From—									
5	V'duct 5	Junc. 5	V'duct 5	Junc. 5	1	Spencer Street					1830	1220	1270	1015	..
..	10	Flinders Street					1015	865	660	455	..
22	21	18	14*	16*	12	Malvern					1625	1120	1420	965	..
..	17	Caulfield					580	..
..	21	Oakleigh					1420	..	1015	660	..
..	23	Clayton				
..	25	Westall				
..	25	Springvale				
26	25	24	17*	18*	28	Noble Park				
9	4*	5	31	Dandenong					1830	1220	1625	1015	..
5	11	10	3*	5	38	Hallam				
7	5	5	3*	5	41	Narre Warren					2030	1625	1015	915	..
5	2*	3	45	Berwick					1015	710	660	405	..
7	6	6	3*	4	47	Beaconsfield					1220	915	815	610	..
9	6	6	6	6	52	Officer				
9	6	6	5*	6	58	Pakenham					2030	1830	1830	1015	..
8	5	5	3*	5	66	Nar-Nar-Goon					1420	1120	815	610	..
7	3*	4	71	Tynong					2030	1830	1830	1015	..
6	8	8	3*	4*	75	Garfield				
7	5	5	3*	3*	79	Bunyip					1015	710	660	405	..
13	11	9	9	9	84	Longwarry					2030	1830	1830	1220	..
10	9	9	7	7	92	Drouin				
					100	Warragul					760	710	510	405	..

WARRAGUL TO SPENCER STREET

Locomotive running Time									
R'side Sect. Loads	Through Ruling Grade Loads		SECTION			TONNES			
Full Load L Elec.	Full Load 710 tns L Elec.	Full Load 1420 tns L Elec.	Kilo-metres	UP	B	L	T	Y	
12	9	11	8	From-Warragul					
11	8	8	16	Drouin	1525	1420	1015	560	
7	4	4	21	Longwarry					
6			25	Bunyip	2030	1830	1830	1220	
8	8	8	29	Garfield	1625	1525	1120	815	
9	5	5	34	Tynong	1525	1420	915	610	
10	6	7	42	Nar-Nar-Goon	2030	1830			
10	6	7	48	Pakenham		1525	1220	815	
8			53	Officer			1015	610	
5	6	7	55	Beaconsfield	1625		1220	915	
7	4	4	59	Berwick	1525	1420	1015	510	
6			61	Narre Warren		1830		710	
10	10	11	69	Hallam					
		6	72	Dandenong	2030	1625	1220	915	
		3	75	Noble Park					
		2	77	Springvale					
		3	79	Westall					
		5	83	Clayton	1525		1015	710	
			85	Oakleigh					
28	22	8	88	Murrumbeena					
			90	Caulfield		1420		915	
			92	Malvern					
22	20	20	99	Toorak					
5	5	5	100	Flinders Street	1830	1830			
				Spencer Street	1830	1420	1525	1015	

NOTE.—Distance between Spencer St. and Maribyrnong River Goods Line (Footscray Goods) is (7) seven kilometres. (See page 35 Metropolitan District W.T.T. Appendix, for loads, etc.)

WARRAGUL AND TRARALGON

Locomotive Running Time														
Roadside Section Loads			Through Ruling Grade Loads					SECTION		TONNES				
Full Load (L Electric)	Y full Load	T full Load	Full Load 710 tns (L Electric)	510 tns (L Electric)	No. 9405 Exp. 305 tns (L Electric)	Y 355 tns	T 455 tns	Kilo-metres	DOWN	B	L	T	Y	
					95 Km/h				From-Warragul Darnum	1420	1120	915	610	
10	13	10	8	8	6	9	8	7	Yarragon					
9	10	9	5	5	5	8	6	12	Trafalgar	2030	1625	1625	1220	
11	12	11	8	8	7	10	8	20	Moe	1220	1120	815	455	
13	16	14	11	11	8	13	12	30	Herne's Oak			455		
12	18	13	10	10		11			Morwell	760	710	510	355	
9	9	9	7	6	13	23	8	44	Maryvale					
..	Morwell Shire					
..	Industrial Siding			1420	1220	
16	18	16	14	14	10	16	14	58	Traralgon	1830	1420	915	610	

TRARALGON AND WARRAGUL

Locomotive Running Time														
Roadside Section Loads			Through Ruling Grade Loads					SECTION		TONNES				
Full Load (L Elec.)	Y full Load	T full Load	Full Load 710 tns (L Elec.)	510 tns (L Elec.)	No. 9405 Exp. 305 tns (L Elec.)	Y 355 tns	T 455 tns	Kilo-metres	UP	B	L	T	Y	
				(1420 ton-nes)					From— Traralgon Morwell Shire Industrial Siding Maryvale Morwell Herne's Oak Moe Trafalgar Yarragon Darnum Warragul					
..	
16	20	19	15	14	405	
9	10	9	7	510	..	
12	16	14	10	28	..	760	710	455	355	
13	18	16	11	11	38	
13	17	15	8	10	46	..	1625	..	1220	1015	
10	15	12	6	7	51	..	1520	..	1015	815	
10	14	12	8	8	58	..	1625	1420	1220	1015	

TRARALGON TO ORBOST

Locomotive Running Time											
Roadside Sectional Loads			Through Ruling Grade Loads		SECTION			TONNES			
Y Full Load		T Full Load	Y 405 tns	T 556 tns	Kilo-metres	DOWN	T		Y		
43	..	31	39	..	22	From-Traralgon					
						Rosedale	610	..	405
44	..	34	38	..	49	" (h)	1015	..	815
					64	Sale	915	..	510
30	..	23	24	..	65	Stratford Junction					
47	..	34	43	32	90	Stratford	1420	..	1015
20	..	14	18	12	100	Fernbank	610	..	405
10	..		9	..	106	Lindenow					
21	..	20	20	18	118	Hillside					
		18			128	Bairnsdale (d)	1420	..	815
..	..	20	138	Nicholson	1015	..	510
..	..	21	149	Bumberrah					
..	..	61	178	Bruthen	560	..	405
..	..	53	200	Nowa Nowa					
..	..	29	215	Waygara					
						Orbost (d)			355

(d) See General Appendix, re vehicles attached by screw couplings, Bairnsdale-Orbost Line.

(h) Assisted in the rear from Traralgon to Stop Board at 158.923 Kilometres (see page 63).

ORBOST TO TRARALGON

Locomotive Running Time											
Roadside Sectional Loads		Through Trains		SECTION			TONNES				
Y Full Load	T Full Load	Y 405 tns	T 610 tns	Kilo-metres	UP	T		Y			
..	35	15	From-Orbost(d)						
..	46	37	Waygara						
..	68	66	Nowa Nowa						
..	28	77	Bruthen	560	..	355
..	16	87	Bumberrah	1015	..	815
	18			97	Nicholson			405
24		23	..	109	Bairnsdale (d)	640	..	455
13	23	12	22	115	Hillside						
					Lindenow	610	..	405
					" (h)	865	..				
21	17	19	15	125	Fernbank						
42	30	38	24	150	Stratford	915	..	510
..		151	Stratford Junction						
30	20	24	..	166	Sale						
50	36	42	..	193	Rosedale	1420	..	1015
48	35	44	..	215	Traralgon	610	..	405

(d) See General Appendix, re vehicles attached by screw couplings, Bairnsdale-Orbost Line.

(h) Assisted in the rear from Bairnsdale to Stop Board at 273.186 Kilometres (see page 63).

TRARALGON AND STRATFORD (VIA MAFFRA)

Locomotive Running Time					SECTION		TONNES				
Roadside Sectional Loads		Through Ruling Grade Loads									
Y, Full Load	T, Full Load	Y, 405 tns	T, 560 tns	T, 610 tns	Kilo-metres	DOWN		T		Y	
20	15	19	14	..	10	From-Traralgon					
34	28	29	23	..	26	Glengarry (g)		815	..	510	..
23	18	20	14	..	37	" (m) (mm)		1015	..	815	..
18	13	16	10	..	47	Cowwarr		1015	..	815	..
18	13	16	10	..	47	Heyfield		710	..	510	..
					47	Tinamba		1220	..	815	..
					63	Maffra		1400	..	1015	..
21	20	17	17	..	64	Stratford Junction					
						Stratford		760	..	610	..
						UP					
22	20	18	..	17	1	From-Stratford					
16	13	13	..	10	10	Stratford Junction		1015	..	710	..
19	15	17	..	13	17	Maffra		1420	..	1015	..
20	18	18	..	14	27	Tinamba		
30	24	25	..	18	38	Heyfield		660	..	405	..
18	15	14	..	14	54	Cowwarr		710	..	455	..
					64	Glengarry		760	..	510	..
						Traralgon		

(m) Assisted in the rear from Traralgon to Stop-board at 159.216 Kilometres, see page 63. For trains so assisted the locomotive running time may be increased by 4 minutes.

(mm) When necessary, three locomotives may be employed on a down goods train from Traralgon to Stop-board at 159.216 Kilometres (Maffra Line), but in such case two locomotives must be in front and the other in the rear (see page 63.)

(g) For trains departing from opposite the Inner Down Home Signal (Post No.9).

MOE AND YALLOURN

Locomotive Running Time				SECTION		TONNES					
Through Ruling Grade Load											
		Y		Kilo-metres	DOWN				T	Y	
..	..	18	..	8	From-Moe Yallourn.	1015	815	..
					UP						
..	..	22	..	8	From-Yallourn Moe	1015	815	..

MORWELL AND MORWELL BRIQUETTE SIDING

Locomotive Running Time					SECTION		TONNES				
					Kilo-metres	DOWN	B	L	T	Y	
..		From-Morwell to					
						Morwell					
						Briquette Siding					
						UP					
..		From-Morwell	1300	1015	850	550	..
						Briquette Sdg. to					
						Morwell					

SPENCER STREET TO KORUMBURRA.

Locomotive Running Time					SECTION		TONNES				
R'side Sect. Loads	Through Trains Ruling Grade Loads										
Full Load	Full Load	T 405 tns	Fast Goods Melb. Yard Nyora 530 tns Nyora-Korumburra 405 tns	Kilo-metres	DOWN	B	T		Y		
6	Viaduct 5	Junction 5	5	1	From- Spencer Street	1830	1270	..	1015	..	
25	8	Flinders Street	
5	..	25	20	10	Toorak	1015	660	..	455	..	
..	12	Malvern	1625	1420	..	965	..	
11	..	9	..	14	Caulfield	..	1625	..	1015	..	
9	..	7	..	17	Murrumbeena	580	..	
8	..	5	..	21	Oakleigh	1420	1015	..	660	..	
..	23	Clayton	
12	..	9	25	25	Westall	
8	..	7	..	27	Springvale	
7	..	5	..	31	Noble Park	
16	..	13	16	39	Dandenong	1830	1625	..	1015	..	
11	..	8	10	45	Aust. Windowglass Siding	1420	1015	..	510	..	
11	..	9	..	52	Lyndhurst	
19	..	14	18	58	Cranbourne	
7	..	6	..	67	Clyde	
16	..	11	13	70	Tooradin	1830	1625	..	1015	..	
15	..	28	23	77	Koo-wee-rup	1420	1015	..	710	..	
15	..	8	9	91	Monomeith	760	530	..	405	..	
9	..	25	25	96	Lang Lang	1420	1015	..	610	..	
27	..	12	11	106	Australian Glass Company Siding	
12	112	Nyora (d)	
..	Loch	
..	Bena	
..	Korumburra Cattle Siding	
..	Korumburra	610	405	..	285	..	

(d) See General Appendix for special instructions re Nyora.

KORUMBURRA TO SPENCER STREET

Locomotive Running Time				SECTION		TONNES					
R'side Sect. Loads	Through Trains Ruling Grade Loads					B	T		Y		
Full Loads		Full Loads	Thro. Goods T-425 tns	Kilo-metres	UP						
					From—						
					Korumburra						
					Korumburra Cattle Siding						
13	..	12	11	6	Bena	660	425	..	305
19	..	15	12	16	Loch	1420	1420	..	1220
14	..	12	11	21	Nyora (d)	710	560	..	405
11	..				Australian Glass Company's Siding		
11	..	18	15	35	Lang Lang		
16	..	12		42	Monomeith		
9	..	7	11	45	Koo-wee-rup		
21	..	17		54	Tooradin	1830	1830	..	1420
20	..	18	17	61	Clyde		
14	..	11	9	67	Cranbourne	1525	1015	..	760
11	..	9	..	74	Lyndhurst		
7	..	6	..		Aust. Windowglass Siding		
9	..	7	15	81	Dandenong	1830	1830	..	1220
	85	Noble Park		
20	..	18	..	87	Springvale		
	89	Westall		
10	..	8	..	91	Clayton	1525	1015	..	710
11	..	9	..	95	Oakleigh		
	97	Murrumbeena		
12	..	10	30	100	Caulfield (d)	1830		..	915
..	102	Malvern		
..	104	Toorak		
26	..	24	20	111	Flinders Street		
6	..	5	5	112	Spencer Street	1830	1525	..	1015

(d) See General Appendix for special instructions re Nyora.

See General Appendix for special instructions re Caulfield.

KORUMBURRA TO YARRAM, TOORA TO BARRY BEACH

Locomotive running Time		SECTION			TONNES			
R'side Sect. Loads	Through Trains Ruling Grade Loads							
	Full Load	Goods "T" 405 tns.	Kilo-metres	DOWN		B	T	Y
..	14	..	10	From- Korumburra	..			
..	10	20	15	Ruby	..	1015	815	710
..	Leongatha	..	815	710	455
..	13	13	23	Leongatha (f)	..	1015		325
..	11	..	31	Koonwarra	..	1220	815	610
..	15	26	42	Meeniyan	..	815	610	285
..	18	17	49	Buffalo	..			
..	29	23	62	Fish Creek	..	610	405	325
..	15	..	72	Foster	..			
..	18	..	82	Toora	..			
..	25	..	103	Welshpool	..			
..	11	..	108	Alberton	..		1625	1220
..				Yarram	..			
..				From Toora	..			
..				Barry Beach Junction	..			
..				Barry Beach	..			

f-For trains required to stop at Ruby.

YARRAM TO KORUMBURRA, BARRY BEACH TO TOORA.

Locomotive Running Time		SECTION			TONNES			
R'side Sect. Loads	Through Trains Ruling Grade Loads							
3/5ths Load 'T'	Full Load	405 tns 'T'	Kilo-metres	UP		B	T	Y
..	From- Barry Beach	..			
..	Barry Beach Junction	..			
..	Toora	..			
7	8	..	5	From- Yarram	..			
19	26	..	26	Alberton	..		1625	1220
12	18	..	36	Welshpool	..		915	710
6	9	..	46	Toora	..	1625	1625	1220
..	32	29	59	Foster	..			
..	17	15	66	Fish Creek	..	610	405	285
..	15	16	77	Buffalo	..			
..	12	..	85	Meeniyan	..			
..	17	27	93	Koonwarra	..	1015	815	455
..	11	..	98	Leongatha	..			
..	30	40	108	Ruby	..			325
				Korumburra	..	610	405	285

(Reserved)

LOCOMOTIVE OR TRAIN SPEEDS AND CLASSES ALLOWED TO RUN ON VARIOUS LINES.

LOCOMOTIVE OR TRAIN SPEEDS

1. The **maximum** speed is the **highest speed allowed** on any portion of the line.

2. **Speed of Trains.**—It must be clearly understood by Enginemen and Guards that the maximum permissible speed authorised for the line and for the type of train must not, under any circumstances, be exceeded over any portion of the journey. In any instance where the times shown in the Working Time-table to run any section conflict with the maximum permissible speed authorised for that particular section, or with any safe working or other instruction, the Time-table times are not to be adhered to, and the matter is to be promptly reported to the Time-tables Co-ordinator, Manager Suburban Train Operations or Manager Country Train Operations (Eastern) by Stationmasters and others engaged in Train Running. Enginemen to bring the matter under notice of any Superior Officer, who must report the matter to his Manager, and, in addition forward copy of his report direct to the Time-tables Co-ordinator.

3. The maximum speeds laid down in respect of the various lines, or portions of lines, are subject to:—

- (i) the provisions of Regulation 59;
- (ii) the special speeds shown on pages 58 to 62 inclusive;
- (iii) such **temporary** speed reductions as are shown from time to time in the Weekly Notice or other printed or written instructions; and
- (iv) the special speeds laid down in clause 7 hereunder, and clause 8, page 54.

4. Passenger trains consisting of the following may run at the speeds laid down for Passenger trains:

- (a) Passenger Carriages (except Suburban 'M' (Tait) or 'CM' vehicles).
- (b) Passenger Brakevans and Powervans.
- (c) Victorian bogie goods vehicles having 'P' as the second last letter of their classification.
- (d) Intersystem vehicles permitted to run at passenger train speeds (See Working Time Table Addenda).

Passenger trains conveying other vehicles must not exceed the maximum permissible speed for those vehicles, and must be specially authorised by the Chief Operations Manager.

(i) Express Goods trains consisting of the following may run at the speeds laid down for Express Goods trains:

- (a) Victorian bogie goods vehicles.
 - (i) having 'W', 'X' or 'Y' as the last letter of their classification except loaded Tank Wagons having 'X' or 'Y' as the last letter of their classification.
 - (ii) Empty Tank Wagons having 'X' or 'Y' as the last letter of their classification.
- (b) Passenger Carriages (except Suburban 'M' (Tait) or 'CM' vehicles).
- (c) Passenger Brakevans and Powervans.
- (d) Intersystem vehicles permitted to run at or above Express Goods train speeds (See Working Time Table Addenda).

Express Goods trains conveying other vehicles must not exceed the permissible speed for those vehicles.

- (ii) Trains conveying any vehicle not included in (i) above, may run at the speeds laid down for goods trains (except loaded 'VHWA' wagons).
- (iii) The maximum speed for Suburban 'M' (Tait) and 'CM' vehicles, loaded Petroleum Tank Wagons and loaded 'VHWA' Wagons is laid down in Special Speeds, page 60 clause 4.
- (iv) It will be the duty of the Guard to inform the Engineman at the commencing point of the train of the Maximum Speed allowed due to the classes of vehicles included in the train and the Engineman or Guard, if relieved, must pass this information on to his relief.

5. Enginemen, Assistant Enginemen, and Guards must keep a good look-out for hand signals, which will be exhibited at the various localities where temporary speed reductions are in force in accordance with the regulations. It must, however, be understood that repairs to lines may be necessary at other places besides those mentioned in the Weekly Notice or other printed or written instructions, and of which, owing to their urgency, it has not been possible to give previous notice. Enginemen must, therefore, be always on the lookout, and be prepared to stop or run at reduced speed whenever and wherever hand signals are exhibited. (See General Appendix respecting Special Permanent Way Signals).

6. **Stationmasters, Signalmen, Guards, Gangers, and others must promptly report through their Superior Officers any case in which a train runs in excess of the speed laid down, and such report must be forwarded to the Head of the Branch without delay.**

7. **Maximum Speed for Trains Hauled by Certain Classes of Locomotives.**—The maximum speed permissible on any line for various classes of locomotives with train attached, are shown hereunder:—

Class	Km/h	Class	Km/h	Class	Km/h	Class	Km/h
B (Diesel-Electric)	115	E Electric 1102-1111	65	L (Elect.)	115	X (Diesel-Elec.) (See Note 4)	115
C (Diesel-Electric) (See Note 4)	80	F (Diesel-Electric)	30	R (Steam)	95	Y (Diesel-Electric)	70
D 3 (Steam)	80	H (Diesel-Electric)	70	S (Diesel-Electric) (See Note 3)	115	NA (Narrow Gauge) Steam	30
		K (Steam)	80	T (Diesel-Electric)	100		
				W (Diesel-Hydraulic)	30		

Note 1.—The maximum speeds laid down for locomotives in clause 7 hereof are subject to the maximum speeds laid down in respect of various lines, or portions of lines, and to the conditions imposed above and also on pages 54 to 57 inclusive.

Note 2.—See page 60 for speed of a locomotive or locomotives with a brakevan of fixed wheel base only attached and for speed of light locomotives.

Note 3.—The maximum speed for trains hauled by "S" class Diesel Electric Locomotives when Hostler's End leading is 50 km/h and when Hostler's End leading in Station Yards 15km/h. Set back movements, when driven from Hostler's End, are not permitted.

Note 4.—The maximum speed for trains hauled by 'X' class Diesel Electric Locomotives No's. 45 onwards and 'C' class locomotives when running long end leading must not exceed 50 km/h.

LOCOMOTIVE OR TRAIN SPEEDS AND CLASSES ALLOWED TO RUN ON VARIOUS LINES—continued.

8. Maximum Speeds for Rail Motor Train.—The maximum speeds permissible on any line for Rail Motor trains are as shown hereunder:—

Rail Motor Trains	Maximum Speed km/h
Diesel Rail Cars (Air-conditioned), 600 H.P. Nos. 40–43	115
Diesel-Electric Rail Motors	100 See footnotes

† See clauses 3 and 5, page 54

Note (a).—Although passenger trains are permitted to run over certain lines at 115 km/h the maximum speed of any passenger train hauling a Diesel Electric Rail Motor must not exceed 100 km/h. However, the 600 H.P. Diesel Rail Cars may be hauled at 115 km/h providing the bogie air springs are inflated.

(b).—The maximum speeds shown above for Rail Motor Trains, are subject to the maximum speeds laid down for passenger trains for the line or portion of line over which the Rail Motor is running, and to the conditions imposed on pages 53 to 62 inclusive. Where any goods vehicle is attached, the speed laid down on page 60 for the type of vehicle concerned must not be exceeded.

CLASSES OF LOCOMOTIVES ALLOWED TO RUN ON VARIOUS LINES

Except where otherwise provided, the following are the particulars of the classes of locomotives that are allowed to run over the various broad gauge lines. The words “and lighter” in respect of some lines or portion of lines mean locomotives of a lighter axle load than the class specified. (See instruction Working Time-table Addenda for locomotive axle loads).

1. Except where instructions to the contrary are in force the classes of locomotives allowed to run on any particular line, may also be worked on any siding connected therewith.

2. In a case of special emergency, the District Engineer may authorise the running, for one return trip, of a heavier class of locomotive (excluding “B” and heavier classes) than specified for a particular line.

3. (a) On the branch line specified hereunder, locomotives of a heavier axle load than those ordinarily authorised in pages 55 to 62 to run over such branch line, may, when necessary for shunting purposes, and subject to Block Working Rules, be placed on the branch line at the station named; in every such case the speed specified herein for the local movement on the branch line must not be exceeded. See also clause (b).

Station	Branch Line	Class of Locomotive that may be used for Shunting on Branch Lines	Speed km/h
Traralgon	Maffra.	All classes except ‘C’ and ‘H’	15

(b) The locomotive must not proceed further than is necessary to clear the junction, and unless the return movement be governed by a fixed signal, the locomotive or train must not be allowed to foul the junction until the Engineman or Guard has been verbally instructed to do so by the Signaller.

4. Pier and Wharf Lines.—“B”, “C”, “H”, “R”, “S” or “X” Class locomotives are not permitted to run on any pier or wharf line, unless specially authorised.

LOCOMOTIVE OR TRAIN SPEEDS AND CLASSES ALLOWED TO RUN ON VARIOUS LINES—continued.

Suburban District Line or Portion of Line Between	Maximum Speed†				Classes of Locomotives Allowed to run
	Passenger Trains		Goods or Express Goods Trains		
	Electric, Diesel or Steam Loco- motive Funnel First	Steam Loco- motive Tender First	Electric, Diesel or Steam Loco- motive Funnel First	Steam Loco- motive Tender First	
Spencer Street and Flinders Street	km/h 30	km/h 30	km/h 25	km/h 25	All classes except "C"
Flinders Street and the Down Home		40	25	25	
Signals at Jolimont Junction (all lines)					
Jolimont Junction and Richmond	50	50	30	30	
Richmond and South Yarra	50	50	50	30	All classes except "H"
South Yarra and Caulfield	55	50	50	30	
Caulfield and Glenhuntly					
"R" Class locomotives excepted	65	50	50	50	
Via "B" Siding			10	10	All Classes except "C" and "H"
Passing over the Glenhuntly Road level crossing Up end Glenhuntly Station	15	15	15	15	
Caulfield and Oakleigh	65	50	65	50	
Oakleigh and Huntingdale		95	95	65	
Huntingdale and Dandenong		80	80	65	"S" and lighter
Flinders Street & Port Melbourne Station	65	50	30A	50B	
Between Speed Board at Down End of Down Platform at Montague and Level Crossing at Inglis Street, Down trains	30	30	30	30	
Between Speed Board at Up end of Down Platform at North Port station and Level Crossing, Bridge Street, Down trains	40	40	30A	40B	
Between Speed Board at Down side of Graham station and Post 38 (Up Starting Signal, Graham), Up trains	50	50	30A	50B	"S" and lighter (See note 4, page 54) "B" and lighter (See note 4, page 54) All classes
Port Melbourne and Station Pier	10	10	10	10	
Graham and Prince's Pier	10	10	10	10	
Spencer Street & North Melbourne Junction	65	50	25	25	
When diverging from a straight track on other lines at Franklin Street Junction	30	30	25	25	All classes except "C" between Sth. Kensington and Newport (See notes, page 54) "S" and lighter
North Melbourne Junction and Newport	65	50	50	50	
Entering Newport Goods Yard			10	10	
Maribyrnong River Line					
In clear daylight			25	15	All classes except "H"
During darkness or foggy weather			10	10	
North Melbourne Junct. and Newmarket Junction	50	50	30	30	
Newmarket Junction and Flemington Racecourse			15	15	
Newmarket Junction and Show Grounds Platform	30	30	15	15	"B" and lighter
Show Grounds Platform and Flemington Racecourse	30	30	15	15	

† See clauses 3 and 4, page 54. A—Hauled by Steam, Diesel or Electric Locomotives.

B—Hauled by Parcels Coaches or Electric Motors.

LOCOMOTIVE OR TRAIN SPEEDS AND CLASSES ALLOWED TO RUN ON VARIOUS LINES—continued.

Melbourne Goods Yards (including South Kensington, Kensington, North Melbourne Junction and Arden Street). Flinders Street Yard, Spencer Street Yard

Line or portion of line	Maximum Speed †
	km/h
Main Goods Lines between West Tower and Viaduct Junction	40
Coburg Goods lines, between West Tower and North Melbourne Junction	40
Main Goods Lines between West Tower and South Kensington.	40
North-Eastern Goods Lines	
North-Eastern Goods Lines to and from Kensington	40
Outside Goods Lines	40
Passing over Level Crossings between the Yard and Appleton and Victoria Docks.	10
Goods trains passing through sidings between Arden Street and Macaulay. See General Appendix	10
On the Reversing Loop	5
Spencer Street Station	
Trains on No. 10a (Non-Platform) track opposite No. 10 Platform whilst country train carriages are standing at No. 10 Platform.	10
Flinders Street Station	
The speed of any train or locomotive on any siding or when being shunted to or from any siding to a running line at Flinders Street, must not exceed 25 km/h.	
This is subject to the special speeds specified hereunder:	
Over Parcels Dock Sidings.	10
Flinders Street Station between box "A" on the west side and boxes "B" and "C" on the east side, all tracks subject to the further restriction. (See hereunder) in regard to Nos. 1A and 5A tracks	25
From west end of No. 1A track and Swanston Street bridge	40
Movements in an easterly direction from the west end of No. 5A track to Swanston Street bridge	10
"C" Box, Flinders Street	
Arriving trains from the Burnley Local Line between the East end of "C" Signal-box and No. 5 track, and No. 4 track via "U"	25
"D" Box, Flinders Street	
Up trains from the Clifton Hill Line, between the overhead bridge near Auto Signal 097 and the platform; speed must not be increased after passing 3-position Home Signal No. 183.	15
Down trains to Clifton Hill Line when passing around the curve between "D" Signal-box and the Down Automatic Signal 092	15
Shunting movements between "D" and "E" Boxes via the "Through Siding".	10
Between Signal No. 319 Swanston Street Bridge on Nos. 1 and 1A East tracks at Flinders Street Station.	25
Jolimont Goods Yard	
Entering from East or West end	15

†See clauses 3 and 4, page 54.

LOCOMOTIVE OR TRAIN SPEEDS AND CLASSES ALLOWED TO RUN ON VARIOUS LINES—continued.

Line or portion of Line Between—	Electric Multiple Unit Trains including Single Unit Trains or Single Motor Car	Maximum Speed †			Class of Locomotives Allowed to Run
		Passenger Trains	Express Goods Trains	Goods or Mixed Trains	
Dandenong and Pakenham	km/h 80	km/h 115	km/h 95	km/h 65 See note "B" below	All classes except "C" and "H"
Pakenham and Moe	115	95	65 See note "B" below	All classes except "C" and "H"
Warragul Station		40	40	40	All classes except "C" and "H"
between Down and Up Home Arrival Signals Nos. 3 and 16-17 respectively					
Moe and Traralgon	100	80	65	except "C" and "H" All classes except "C" and "H"
Traralgon and Bairnsdale (via Sale)	100	80	65	"T" and lighter
Sale Wharf Line	15	"T" and lighter
Stratford Junction and Stratford					
Passing over Avon River Bridge 221.260 Kilometres. All locomotives and trains	15	15	15	"T" and lighter
Bairnsdale and Orbost	55	55	55	All classes except "C" & "H"
Moe and Yallourn	30	"T" and lighter
Yallourn and Brown Coal Mine	25	25	25	All classes except "C" and "H"
Morwell and Morwell Briquette Siding	25	All classes except "C" and "H"
Morwell Shire Industrial Estate Siding	25	All classes except "C" and "H"
Traralgon and Heyfield	80	80	65	"B" and lighter
Heyfield and Maffra	80	80	55	"B" and lighter
Maffra and Stratford Junction	80	80	65	"B" and lighter
Dandenong and Clyde	95	..	65	All classes except "C" and "H"
Clyde and Koo-wee-rup	70	55	50	All classes except "C" and "H"
Koo-wee-rup and Nyora	95	..	65	All classes except "C" and "H"
Nyora and Foster	80	..	65	All classes except "C" and "H"
Foster and Yarram	80	..	65	"B" and lighter
Barry Beach Junction and Barry Beach	25	"B" and lighter

† See clauses 3 and 4, page 54.


NOTE B. The maximum speed between Dandenong and Moe for any goods train excepting Express Goods Trains so shown in the working Time-table, consisting of all automatically coupled vehicles (including locomotive and brakevan) will be 70 km/h. It will be the duty of the Guard of any goods train running between Dandenong and Moe to inform the Engineman at the commencing point of the train, and also at any point where the composition of the train is altered, if the train is not completely automatically coupled, and the Engineman, if relieved, must pass this information on to his relief.

SPECIAL SPEEDS

The maximum speeds laid down in clauses 1, 2, 3 and 4 hereof are subject to the maximum speeds laid down in respect of the various lines or portions of lines and to

- (i) the provision of Regulation 59;
- (ii) such **temporary** speed reductions as are shown from time to time in the "Weekly Notice" or other printed or written instructions; and
- (iii) the special speeds laid down in clauses 7 and 8, pages 53 and 54.

1. Curves.(a) Every curve, with the exception of those referred to in clause 2 hereof, that is of such a radius as to render necessary any modification of the foregoing speeds is indicated by a **curve board** (see diagram in margin) placed on the left-hand side of the line at the entrance to the curve. The number shown on the Curve Board indicates in **kilometres per hour, the maximum speed** allowed when going round the curve. It is pointed at one end, and is so placed that the pointed end indicates the direction of the curve, right-hand, or left-hand, as the case may be. The speed must be reduced before the locomotive or train enters on curve, and the indicated speed must not be exceeded until the whole train is clear of the curve.

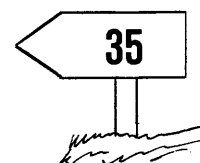

2. Passing Over Points.The following speed restrictions apply generally when passing over points at stations, junctions and sidings:

	Maximum Speed	
	When Running to or from Lines Diverging from the Straight Track	When Running on the Straight Track
	km/h	km/h
(a) Except as shown in sub-clauses (b) and (c) hereof		
(i) Over facing points worked from a locking frame or otherwise securely fastened, or over trailing points	40	65††
(ii) Over facing points held by hand	25	25
(b) (i) Between OAKLEIGH and DANDENONG and DANDENONG and NYORA, over facing points worked from a locking frame or otherwise securely fastened, or over trailing points	40	80††
(ii) Between DANDENONG and MOE except BUNYIP, LONGWARRY and MOE, over facing points worked from a locking frame or otherwise securely fastened, or over trailing points	40	115††
(iii) At Bunyip (Up End)	40	95††
" (Down End)	65	95††
At Longwarry	65	95††
At Moe	65	115††
(iv) Between MOE and TRARALGON except at Herne's Oak, Morwell Up End No. 2A track, Hazelwood Siding, Maryvale A.P.M. Siding and Morwell Shire Industrial Siding, over facing points worked from a locking frame or otherwise securely fastened, or over trailing points	40	100††
At Herne's Oak	40	95††
At Morwell Up End No. 2A Track	65	95††
At Hazelwood Siding	..	95††
At Maryvale A.P.M. Siding	..	95††
At Morwell Shire Industrial Siding	65	95††
(c) (i) Between TRARALGON and BAIRNSDALE at Hillside ONLY	40	115††

†† Where the through running track is on a curve the speed passing over points is limited by the maximum speed indicated on the curve board, provided this does not exceed the maximum permissible speed over points.

SPECIAL SPEEDS—continued

3. At Various Places.—(a) All trains.

Description	Maximum Speed
Terminal Stations— When Locomotive is passing the near end of platform at which the train has to stop. See clauses (d), Rule 11 Appendix 111., and the General Appendix.	km/h 25
Suburban Stations— Entering and passing through in foggy weather	25
On Single Lines— When entering a crossing station at which the train has to stop.	25
Staff Stations— When staffs are exchanged by means of Staff Automatic Exchange apparatus.	115
When exchanging miniature staff, by hand—	
(a) When cane carrier is used	30††
(b) When automatic staff exchange carrier is used	25††
When exchanging staff (ordinary type), or delivery ticket.	25††
Rail Motor Trains when engineman is delivering or receiving a staff or ticket (see also General Appendix)	10
"S" Class Diesel Electric Locomotives—Hostler's End leading	See N. ++
Crossing Stations— When backing a train over level crossing not provided with gates	10
Examining Stations— When entering stations. See also General Appendix.	15
Permanent Way Repairer's Signals— In clear weather, when a green hand signal is waved slowly from side to side. See Regulations 98, 179, 265 and 274, also General Appendix.	25
Single Line Working— Over points which become facing points when the traffic of a double line is being worked over a single line	15
When Air Brake is Wholly Inoperative— On a long falling gradient, or when approaching any station or junction	25

†† NOTE:—When a locomotive Engineman receiving a staff from or delivering a staff to a Signaller standing on ground level, the speed of the train must not exceed 10 km/h.

When a locomotive Engineman is exchanging a Staff with a Signaller standing on ground level, the train must be brought to a stand in order that the exchange may be effected safely.

++ When a locomotive Engineman on an "S" Class Diesel locomotive running Hostler's End leading is receiving a staff from or delivering a staff to or exchanging a staff with a Signaller either on platform level or ground level the locomotive must be brought to a stand in order that the operation may be effected safely.



(b) Express Goods Train—At various locations, a Speed Board (See diagram in margin) placed on the left hand side of the line at a suitable distance before reaching a signal indicates that Express Goods Train speed must be promptly reduced to not more than the figure in the kilometres per hour shown on such board until sighting the next fixed signal. The train will then proceed according to the aspect displayed.



(c) Passenger trains—At various locations, a Speed Board (See diagram in margin) placed on the left hand side of the line at a suitable distance before reaching a signal indicates that Passenger Train Speed must be promptly reduced to not more than the figure in kilometres per hour shown on such board until sighting the next fixed signal. The train will then proceed according to the aspect displayed.



(d) Goods trains—At various locations, a Speed Board (See diagram in margin) placed on left hand side of the line at a suitable distance before reaching a signal indicates that goods train speed must be promptly reduced to not more than the figure in kilometres per hour shown on such board until sighting the next fixed signal. The train will then proceed according to the aspect displayed.

SPECIAL SPEEDS—continued

4. Various vehicles, Trains, Light Locomotives, Steam and Diesel Cranes, Diesel Fordson Rail Tractors.

Description	Maximum Speed
	km/h
Suburban 'M' (Tait) and 'CM' vehicles	80
Bogie Petroleum Tank Wagons when loaded (except those with "A" as the last letter of their classification)	80
Bogie Petroleum Wagons when empty (except those with "A" as the last letter of their classification)	95
"Z" or "ZL" Brakevans and Goods Vehicles, except Bogie Goods Vehicles with "W", "X" or "Y" as the last letter of their classification.	70
VHWA Wagons when loaded (Permission must be obtained from the Train Controller before loaded 'VHWA' wagons are conveyed by any train)	
See item 4 (iii) on page 53.	45
"J" Wagons when loaded.	60
Goods Trains by which "Dead" Locomotives are conveyed	
See page 94 Clause (b) General Appendix	
Light Locomotives—	
"S" Class Diesel Electric Locomotive No. 1 End Leading.	100
"S" Class Diesel Electric Locomotive Hostler's End Leading (See note 3, page 59).	50
"B", "L" or "T" or "X" class.	100
"X" Class Diesel Electric Locomotives No. 45 onwards, and "C" Class long end leading (See Note 4, page 53)	50
"H" and "Y"	70
"F" and "W" class.	30
"R" or "K" class.	80
"C" class (short end leading).	80
Locomotive or Locomotives with a Brakevan of Fixed wheel Base only attached. See page 53, clause 5.	70
Any Breakdown Van Train or any Train to which a Breakdown Brakevan is attached	65
Locomotives when running in any Locomotive Depot within the T.R. Point	15
Any Train by which any Diesel or Steam Crane is conveyed	The maximum speed of the Diesel or Steam Crane conveyed
	50
	(See note below)
Diesel Cranes—	
Diesel Travelling Crane No. 45 (Way and Works Branch, 10 tonnes)	

Note:—The maximum permissible speed for the Way and Works Branch No. 45 Diesel Crane (10 tonnes) will be as follows:—

Line or portion of Line	Maximum Speed	Line or portion of Line	Maximum Speed
	km/h		km/h
Dandenong and Sale	50	134.575 Km. and Yallourn	30
Sale and Stratford	50	Yallourn and Latrobe River Bridge	25
Stratford and Bairnsdale	50	Latrobe River Bridge and Brown	25
Bairnsdale and Orbost	30	Coal Mine	
Traralgon and Maffra	50	Dandenong and Yarram.	50
Maffra and Stratford Junction	30		
Moe and Yallourn :—			
Moe and 134.575 Km.	50		

On Metropolitan lines the crane may run at a maximum speed of 50 km/h or at the speed permitted for a "T" Class locomotive whichever is the lower.

SPECIAL SPEEDS—continued

4. Various Trains, Light Locomotives, and Steam and Diesel Cranes, Diesel Fordson Rail Tractors—continued.

Description	Maximum Speed
Steam Cranes—	
No. 19 (Rolling Stock Branch, Wreckage, 61 tonnes)	km/h 65 (See note)
No. 10 (Rolling Stock Branch, 10 tonnes)	25 (See note)
No. 36 (Stores Branch, Grab)	25
No. 44 (Way and Works Branch, 3 tonnes)	25

Note:—When the 61 tonnes Wreckage Crane (No. 19) is conveyed by special train, the train is permitted to run only on the lines and up to maximum speed for the Crane as set out below provided that the maximum speed of the train shall not exceed:—

- (a) The maximum laid down for the locomotive hauling the train over the portion of the line concerned.
- (b) The maximum speeds for Goods Trains.
- (c) The speeds in the Special Speed Section.

When conveyed by a goods train the speed of the train shall be laid down for a goods train over the line concerned provided that it does not exceed the maximum speed for the crane as set out herein.

The maximum permissible speeds for the 61 tonne Wreckage Crane are as follows:—

Line or portion of Line between:—	Maximum Speed
Dandenong and Moe	km/h 65
Moe and Traralgon	55
Traralgon and Stratford (via Sale)	Not Allowed
Stratford and Bairnsdale	Not Allowed
Bairnsdale and Orbost	Not Allowed
Traralgon and Stratford Junction (via Maffra)	Not Allowed
Moe and Yallourn	65
Yallourn and Latrobe River Bridge	25
(not permitted over Latrobe River Bridge)	
Latrobe River Bridge and Brown Coal Mine	Not Allowed
Dandenong and Yarram.	Not Allowed

Description	Maximum Speed
On Truck Weighbridge—	
(i) Vehicles over Scales	km/h 15
(ii) Locomotives or Vehicles over Weighbridge relief rails	15
Pushing Trains—	
On Running Lines	15
When passing around any curve of less than 161 m radius	10
Empty trains, when Guard, Shunter, or other employee leaves the leading vehicles to attend to the points	3

SPECIAL SPEEDS—continued.

4. Various Trains, Light Locomotives, Steam, Diesel Cranes and Diesel Fordson Rail Tractors—continued.

DIESEL FORDSON RAIL TRACTOR

Description	Maximum Load Hauling or Propelling	Maximum Speed
Diesel Fordson Rail Tractor—		
On Level Track	Tonnes 230	km/h 30
On grades 1 in 50	30	
1 in 75	65	
1 in 100	85	10
1 in 110	90	
1 in 200	150	

TRAINS ON RUNNING LINES WITHOUT A BRAKEVAN IN THE REAR

Subject to the conditions laid down in Regulation 232 and the instructions pages 136 and 137, General Appendix, the following trains or classes of trains may run without a brakevan in the rear on the sections of lines specified, viz.:-

Train or Class of Train	Section	Maximum Number of Vehicles
*Goods Train	Between Flinders Street and Spencer Street	10
	†Between Spencer Street and Newmarket	40
	†Between Flinders Street and Port Melbourne	60
	Between Graham and Princes Pier	35
	Between Melbourne Yard and Maribyrnong River Goods Siding	40
	Between Newport and Williamstown, Newport South and Newport Workshops	30
	†Between Melbourne Yard and Newport (Via Passenger Lines)	40
	†From Caulfield to Glenhuntly	20
	†Between Dandenong and Lyndhurst	10
	†Between Dandenong and General Motors	30
	Between Moe and Yallourn	60
	†Between Morwell and Hazelwood	20
	†Between Morwell and Maryvale Siding	20
	†From Traralgon Cattle Yards (Sale Line) to Traralgon	15
	Between Sale and Sale Industrial Estate Private Siding	15
	From Woollen Mills Siding (Stratford Line) to Sale	10
	From S.E.C. Siding to Bairnsdale	10
	From Korumburra to Korumburra Cattle Siding	10
	†Between Toora and Barry Beach	20
	Between Melbourne Yard and Westall	2

*Except where otherwise provided, the practice must be limited to the hours between sunrise and sunset.

†Also during the hours of darkness.

LOCOMOTIVES RUNNING TENDER FIRST

1. Unless specially authorised, no locomotive employed as assisting locomotive on a passenger train shall run tender first.
2. Subject to paragraph 1, a locomotive may run tender first on any line at any time.

LOCOMOTIVES ASSISTING IN FRONT OF TRAINS

(Regulation 174)

1. (a) Subject to the following instructions, an assisting locomotive may be employed in front on a passenger mixed or goods train over the lines or sections of lines shown in clause 5 hereunder.
(b) The train locomotive and the assisting locomotive must be of a class allowed to run on the portion of the line over which the assisting locomotive is to be employed.
(c) in the case of—
 - (i) Passenger Trains—The load must not exceed the maximum authorised load for the train concerned. In no case must either locomotive be run tender first.
 - (ii) Goods Trains—The authorised load, vehicular or tonnage, must not be exceeded.
2. If the train will use the Automatic Staff Exchanger and only one locomotive be so equipped this locomotive shall be the leading locomotive.
3. When a train is hauled by a steam locomotive and a Diesel Electric or Diesel Hydraulic locomotive, the steam locomotive must trail.
4. When an assisting steam locomotive is employed, a water tank may be attached between the locomotives.
5. The lines and sections of lines on which double heading of trains is permitted are as shown hereunder:—

Section—

Melbourne and Bairnsdale, via Rosedale or Maffra. Dandenong and Yarram.
Bairnsdale and Orbost.
Moe and Yallourn.

6. Where a higher powered diesel locomotive than "T" or "Y" class is running in multiple with either "T" or "Y" class locomotive, the higher powered locomotive with a dynamic brake and staff exchanging apparatus, must be the leading locomotive, except where instructions have been issued to the contrary.

LOCOMOTIVES ASSISTING IN REAR OF TRAINS

(Regulation 173).

1. Locomotives are only to assist in rear of trains over such sections of the line as are shown in the following list, or in cases of emergency, in accordance with the Rules and Regulations.
2. During foggy weather, a passenger or mixed train must not be assisted by a locomotive in the rear: the assisting locomotive must be attached in front subject to the provisions laid down in the instruction under the heading of Locomotives Assisting in Front of Trains.
3. The bank locomotive must be coupled to the rear of the train whilst the train is stationary, and the automatic brake must be connected throughout the whole of the train. When the necessary brake tests have been completed and the enginemen have exchanged the proper hand signals the train may proceed.
- 4 (a) When a bank locomotive runs through the section, it must not be uncoupled until the train is within the protection of the home signal at the station to which it is appointed to run.
(b) At certain places, the train is only assisted to a Stop Board, or other specified location in the section. In these circumstances the train must be stopped with the train locomotive near to the Stop Board or other specified location. The bank locomotive must be immediately uncoupled from the train which may then proceed. The bank locomotive must return without delay, to the home signal at the station in the rear.
5. Locomotives assisting on goods trains must not be allowed to remain attached to trains after load has been so reduced that assisting locomotive is no longer required. Locomotives must be returned as soon as possible and from nearest suitable station, in every case, unless required for loading on the return journey.

In all cases when an assisting locomotive to be returned light is held for more than fifteen minutes, a full report, giving particulars of the detention, must be forwarded to the Chief Train Controller.

6. The employment of a locomotive to assist in the rear of a goods train where authorised by the abovementioned instructions is permissible whether the train concerned is hauled by one or two locomotives in front provided that the relevant instructions contained in Working Time-table books relating to locomotives assisting in front of trains (Regulation 174), and locomotives assisting in rear of trains (Regulation 173) are fully observed.

List of Sections over which trains may be assisted in the rear:—

Section	Class of Train and Special Instructions to be observed
Traralgon to "Stop Board" at 158.923 km. (Sale Line).	Goods Trains.
Traralgon to "Stop Board" at 159.216 km. (Maffra Line).	Goods Trains.
Bairnsdale to "Stop Board" at 273.186 km.	Goods Trains.

(Reserved)

PUSHING TRAINS ON RUNNING LINES

Subject to the conditions laid down in Regulation 201 and supplementary instructions contained on page 109 of the General Appendix permission is given for trains to be pushed on Running Lines at the following places:

PLACES	ADDITIONAL ORDERS
Barry Beach Junction and Barry Beach	Number of vehicles not to exceed (6)
Dandenong and Shell Co's Siding	
Traralgon to Traralgon Cattle Yards (Sale Line)	Number of vehicles not to exceed (15)
Sale to Woollen Mills Siding (Stratford Line)	Number of vehicles not to exceed (10)
Bairnsdale and Shell Co's Siding	Number of vehicles not to exceed (4)
Bairnsdale to S.E.C.	Number of vehicles not to exceed (10)
Waygara Sawmilling Co. Siding to Nowa Nowa	Number of vehicles not to exceed (8)
Cattle Siding to Korumburra	

TRAILING OF VEHICLES BEHIND PASSENGER AND GOODS TRAINS

In accordance with instructions contained in page 137 in the General Appendix permission is granted for vehicles to be trailed behind the train brakevan of passenger and goods trains on the following lines:

LOCATION BETWEEN	TRAIN	CLASS OF VEHICLE
Melbourne to Traralgon (Tue. to Fri.)	No. 9405	Four VLBY Vans
Sale to Bairnsdale (Mon. to Sat.)	No. 8406/8407	One VBPY Van
Sale to Bairnsdale (Fri.)	No. 8432/33	Two VBPY Vans
Sale to Melbourne (Tue. to Fri.)	No. 8450/51	One VBPY Van
Sale to Melbourne (Sat.)	No. 8452/53	One VBPY Van
Sale to Melbourne (Mon. to Sat.)	No. 8468/69	One VBPY Van
Traralgon to Melbourne (Mon. to Fri.)	No. 8474/75	One VBPY Van

AUTHORISED WORKING OF GOODS TRAINS

EASTERN DISTRICT

MELBOURNE – WARRAGUL – YALLOURN – MORWELL BRIQUETTE SIDING – TRARALGON.

DOWN

No. 9405 is to be limited to 500 tonnes consisting of bogie vehicles suitable for 95 km/h operation and stops Flinders Street (No. 1 Centre Platform) to pick up parcels, etc.
Conveys two 'VLBY' vans for Moe and Morwell (including Warragul loading) and bogie brakevan Traralgon. Stops Bunyip, Yarragon and Trafalgar to discharge parcels. Parcels for stations Nar-Nar-Goon to Drouin (Bunyip excepted) to be discharged at Warragul and returned on 06 05 Mon. to Fri., 06 00 Sat. (No. 8440) Pass., shunt Maryvale. May convey available urgent traffic for Traralgon and beyond.

NOTE: –Maryvale loading to be definitely marshalled next to the locomotive.

- No. 9407 Through: Conveys Morwell and Maryvale loading. May shunt at other locations as arranged by Control.
- No. 9411 Through: Ex Melbourne Yard or connect ex North Geelong. Conveys superphosphate for Moe and beyond.
- Nos. 9409, 9415, 9425 Through: Empty wagons Morwell Briquette Siding as arranged by Control.
- No. 9419 Empty wagons Yallourn to Morwell Briquette Siding.
- No. 9423 Roadsides. Loading to be marshalled in station order i.e. Brakevan, Traralgon and beyond, Dandenong to Morwell.
- Nos. 9427, 9441 Through: Block empties Morwell Briquette Siding.
- No. 9429 Through: Orbost, empty wagons log traffic
- No. 9431 Through: Melbourne Yard to Berwick.
- No. 9447 Through: Loading to be marshalled: Ex Melbourne Yard–Orbost line pers. Ex Westall– loading and TNT container traffic for Bairnsdale, then empty timber wagons. Also conveys loading in a block ex Dandenong and marshalled from Down end – beyond Bairnsdale, Bairnsdale. Moe, Morwell.
- No. 9453 Through: Brakevan, beyond Bairnsdale, Bairnsdale, empty wagons for Maryvale, then Morwell loading ex Melbourne Yard.
- No. 9457 Through: Brakevan, Sale and Maffra lines, Traralgon, Moe and Warragul loading ex Melbourne Yard. Also conveys Warragul loading ex Dandenong marshalled next to locomotive.
- No. 9459 Through: Ex Port Melbourne. Convey empty wagons for Oakleigh and Dandenong if required. Empty wagons Morwell, loaded and empty wagons Maryvale, empty timber wagons Orbost.

TRARALGON – MAFFRA – ORBOST.

- No. 9413: Roadsides.
- No. 9411: Through to Stratford, then Roadsides. (May convey Maffra line loading).
- Nos. 9429, 9447, 9453: Through.

TRARALGON – SALE.

- No. 9457 Roadside.

AUTHORISED WORKING OF GOODS TRAINS (Continued)

UP

SALE – TRARALGON

No. 9450 Roadsides
No. 9470 Through: May shunt Rosedale as arranged by Control.

ORBOST – MAFFRA – TRARALGON

No. 9414 Roadsides: Ex Maffra.
No. 9430: Roadsides to Bairnsdale, then through.
No. 9474: Roadsides to Bairnsdale, then through. Berwick and Maryvale traffic detached Traralgon.
No. 9476 Roadsides: Block log traffic. Clear Traralgon overflow received off No. 9474.

TRARALGON – MORWELL BRIQUETTE SIDING – YALLOURN – WARRAGUL – MELBOURNE

No. 9428 Through: Clear Maryvale loading for Montague. Shunt other locations as arranged by Control.
No. 9430 Through: Berwick timber next to loco, Westall timber on van. Clear Berwick timber ex Traralgon received off No. 9474. Shunt Berwick only, terminate Westall.
Nos. 9432, 9472 Through: Block briquette traffic Maribyrnong River Terminal, ex Morwell Briquette Siding.
Nos. 9444, 9452 Through: Morwell Briquette Siding to Melbourne Yard or as arranged by Control.
No. 9448 Roadsides: Briquette traffic for Yallourn ex Briquette Siding and Moe.
No. 9456 Roadside: Empty timber wagons Berwick to Dandenong.
No. 9458 Roadsides: Clear Maryvale except Interstate, Fairfield and Montague traffic.
No. 9462 Through: Clear Maryvale except Fairfield and Montague traffic. Shunt Morwell, Dandenong if required.
No. 9470 Through: Ex Sale. Connect No. 9414 ex Maffra. Convey loaded and empties ex Traralgon. Shunt Dandenong, other locations as arranged by Control.
No. 9474 Through: Ex Orbost. Shunt Dandenong, other locations as arranged by Control.
No. 9476 Through: Ex Orbost. Block log traffic. Clear overflow ex Traralgon received off No. 9474.
No. 9478 Through: Convey Maryvale loading received at Traralgon off No. 9474. Clear Maryvale loading for Fairfield and Montague. Shunt Flinders Street.

AUTHORISED WORKING OF GOODS TRAINS—continued.

**SOUTH-EASTERN DISTRICT
MELBOURNE-KORUMBURRA-YARRAM**

DOWN

- No. 9460/61 Conveys superphosphate ex Geelong. Through to Korumburra. Roadside Korumburra to Fish Creek.
- No. 9493 Connect with P. 6 ex Tottenham Yard. A.W.G. Siding – detach and place wagons from Tantanoola and clear empty sand wagons. A.G.M. Siding – clear up loading into Loop Track, then place empty sand wagons.
- No. 9483 Roadside. Detach cement wagons at Oakleigh, Dandenong and Lyndhurst.
- Nos. 9484/85,
9489, 9495 Through.
- No. 9487 Locomotive and brakevan Dandenong to Cranbourne (ex Berwick).
- No. 9491 Stops Flinders Street (No. 1 Platform) to pick up parcels, etc. for stations Cranbourne to Welshpool inclusive. Conveys loading for Korumburra Monday to Friday, beyond Korumburra Monday and Thursday. Loading for stations Cranbourne to Nyora inclusive may be conveyed (if room) on Tuesday, Wednesday and Friday. Clear Dandenong.
- To be marshalled ex Melbourne as follows:
- Brakevan
 - Loading beyond Korumburra
 - Roadside Cranbourne to Nyora
 - Louvre Van (Flinders Street loading)
 - Locomotive

UP

- No. 9480 Roadside to Dandenong, then through to Spotswood.
- No. 9482 Roadside to Korumburra then through. May shunt Nyora, A.G.M. Siding and Dandenong if required.
- Nos. 9488,
9492 Through
- No. 9490 Through. May shunt Dandenong if required.
- No. 9494 Shunt A.G.M. Siding, A.W.G. Siding, then through to Spotswood.
- No. 9496 Roadside.
- No. 9498 Roadside to Caulfield, then through to North Geelong.
-

MARSHALL LOADS UP GOODS TRAINS

All Up Goods Trains are to be marshalled en route in the following order:—

Locomotive, Dandenong loading, Through livestock, Newmarket livestock, Sunshine and Newport livestock, Jolimont loading, all perishable loading, Dynon area (including Bogie Exchange), empty vans and wagons, Cowper Street loading, Melbourne Goods (except perishables), export butter, Victoria Dock and Appleton Dock loading, empty returns, brakevans.

NOTE:— On arrival in Melbourne Yard all perishable loading must be next to the locomotive and when picking up en route the above marshalling arrangements must be strictly observed.

(Reserved)

CLEAR LENGTHS OF CROSSING TRACKS AND REFUGE

SIDINGS

(Measurements to Nearest Metre)

STATION	No. 1 TRACK	No. 2 TRACK	No. 3 TRACK
MELBOURNE-ORBOST (via Sale)			
Narre Warren	—	564	—
Berwick	—	503	—
Pakenham	—	549	—
Nar-Nar-Goon	—	564	—
Drouin	—	238	—
Warragul	—	509	411
Yarragon	—	—	579
Trafalgar	—	—	625
Moe (See note)	—	533	—
Herne's Oak	—	675	—
Morwell	—	(No. 2a) 1887	—
Traralgon	—	351	—
Rosedale	—	152	—
Sale	137	110	259
Stratford	—	213	152
Fernbank	—	244	—
Lindenow	—	229	107
Bruthen	219	189	—
Nowa Nowa	238	142	—
MOE-YALLOURN			
Yallourn	518	396	378
MORWELL-MORWELL BRIQUETTE SIDING			
Morwell Briquette Siding	549	549	—
TRARALGON-MAFFRA			
Glengarry	—	244	—
Cowwarr	305	244	—
Heyfield	183	183	—
Tinamba	262	247	—
Maffra	—	305	183
MELBOURNE-YARRAM			
Cranbourne	366	366	—
Tooradin	366	366	—
Koo-wee-rup	—	518	244
Lang Lang	381	328	—
Nyora	—	183	122
Loch	—	183	—
Korumburra	—	145	—
Leongatha	—	198	168
Meenyan	366	344	—
Fish Creek	—	155	—
Foster	—	137	—
Toora	—	146	—
Yarram	305	244	—

NOTE:—THE INSIDE RECEIVER TRACKS AT MOE ARE 411 METRES.

(Reserved)

IMPORTANT

Amendments to this book will be issued in the form of W.T.T. Circulars numbered consecutively, or by "A" notice. All alterations should be made neatly in ink as soon as possible after receipt of each amending notice, particulars of which should be recorded hereunder.

[illegible]

[illegible]